

ACR RECESSED AIRCURTAIN

ELECTRICALLY HEATED, AMBIENT & LPHW

INSTALLATION AND OPERATING MANUAL

INDEX

Section

General information -----	1
Dimensions -----	2
Technical Specification -----	3
Wiring Details -----	4
Installation Details -----	5
Servicing & Maintenance -----	6
Spare Parts -----	7
Fault Finding -----	8
Parts replacement -----	9
User Instructions -----	10

WARNINGS

- 1 This appliance must only be installed by a competent person in accordance with the requirements of the Codes of Practice or the rules in force.
- 2 All external wiring MUST comply with the current IEE wiring regulations.
- 3 Warning this appliance must be earthed.

Document Index.

1 Installation Requirements

- 1.1 Introduction
- 1.2 General
- 1.3 Electrical Supply
 - 1.3.1 Electronic Controller
 - 1.3.2 SmartElec Controller
- 1.4 Location
- 1.5 Clearance Distance
- 1.6 Health and Safety
- 1.7 Standards

2 Dimensions

- 2.1 AC Air Curtain
- 2.2 Electronic Controller
- 2.3 Optional SmartElec Controller

3 Technical Specifications

- 3.1 Electrical Heated, Std Capacity 6-18kW
- 3.2 Electrical Heated, High Capacity 12-18kW
- 3.3 Ambient, Std Capacity
- 3.4 Ambient, High Capacity
- 3.5 LPHW, Std Capacity
- 3.6 LPHW, High Capacity
- 3.7 Electronic Controller
- 3.8 SmartElec Controller

4 Wiring Diagrams

- 4.1 Installer Wiring Electrically Heated 9&2kW
- 4.2 Installer Wiring Electrically Heated 18&24kW
- 4.3 Installer Wiring Ambient
- 4.4 Installer Wiring LPHW
- 4.5 Factory Wiring Electrically Heated 9&2kW
- 4.6 Factory Wiring Electrically Heated 18&24kW
- 4.7 Factory Wiring Ambient
- 4.8 Factory Wiring LPHW
- 4.9 Network Wiring Electronic Controller
- 4.10 Installer Wiring SmartElec Controller
- 4.11 Factory Wiring SmartElec Controller
- 4.12 Network Wiring SmartElec Controller

5 Installation Requirements

- 5.1 Mounting
- 5.2 Electrical Supply
- 5.3 Installation
- 5.4 Standard Controller
- 5.5 Option SmartElec Controller
- 5.6 LPHW only
- 5.7 Wiring

6 Servicing & Maintenance Instructions

7 Spare Parts

- 7.1 General
- 7.2 SmartElec Controller

8 Fault Finding Guide

- 8.1 General
- 8.2 Electrical Heated
- 8.3 Electronic Controller
- 8.4 Optional SmartElec Controller
 - 8.4.1 Fault Code chart
 - 8.4.2 LED indication

9 Replacing Parts

- 9.1 Rotor and Motor
 - 9.1.1 SE
 - 9.1.2 HE
- 9.2 Electrical Element
 - 9.2.1 SE
 - 9.2.2 HE

10 User and Operating Instructions

- 10.1 Keypad
- 10.2 Operation
- 10.3 Engineers Settings
 - 10.3.1 Auto Mode
 - 10.3.2 Door Switch Mode
- 10.4 Optional SmartElec Controller
 - 10.4.1 Keypad
 - 10.4.2 Operation
 - 10.4.3 Network Addressing

General Information

1.1 Introduction

This instruction manual describes the Airbloc ACR Recessed range of air curtains.

Models range from 1000mm to 2000mm in length, in both Standard and High capacity and are available in either Electrically heated, Ambient or LPHW. They are designed for discreet positioning in a suspended ceiling or bulkhead in the doorways of retail or commercial premises. Optional case for doorways with restricted space and no suspended ceiling or bulkhead

Each air curtain is supplied with a fully electronic controller giving multi fan and heat settings (electrically operated units) via a simple key pad which can be mounted up to 50m from the air curtain. Optional BMS time control, external thermostats and door interlocks can be installed.



fig.1. xxxxxxxx Program panel

The program panel shown above allows the user to control either a single air curtain, or a network of up to 6 air curtains, and provides the following functions:-

- Heat On Off or Auto via optional thermostat
 - Off or Low, Medium and High Fan Speeds
- For further details please refer to section 10.2

Alternatively on electrically heated models, an optional SmartElec control system consists of a base unit (installed within the air curtain) and a program panel that can be installed remote from the air curtain. Usually, the program panel is mounted at a low level from the air curtain for user access and to a maximum distance of 50m. The base unit and program panel are linked by low voltage cable as specified in these instructions.

The SmartElec factory fitted base unit shown above provides terminals for 3 phase supply connection and the low voltage program panel wires. The SmartElec base unit rapidly pulses energy to the heating elements. This combined with the inbuilt intelligent sensor control, maintains a fixed outlet temperature, thereby reducing energy consumption as compared to an air curtain without the SmartElec control.



fig.2. SmartElec Controller

The program panel shown above allows the user to control either a single air curtain, or a network of up to 16 air curtains, & provides the following functions:

- Heat On or Off
- Off or Low, Medium and High Fan Speeds
- Air Outlet Temperature

For further details please refer to section 10.3

1.2 General

All installations must be in accordance with the regulations in force in the country of use.

These instructions must be handed to the user on completion of the installation.

Installers and service engineers must be able to demonstrate competence and be suitably qualified in accordance with the regulations in force in the country of use.

To ensure continued and safe operation it is recommended that the appliance is serviced annually.

The manufacturer, offers a maintenance service. Details are available on request.

The air curtain outlet grille and case air inlet slots must not be obstructed during use.

1.3 Electrical Supply.

For full electrical loadings, please refer to the individual technical data sheets within this manual.

It is recommended that the electrical supply to the base unit in the air curtain is via an appropriate switched isolator in accordance with the regulations in force in the country of use and must be via a fused isolator having a contact separation of greater than 3mm in all poles.

BMS control, time switches, room thermostats and door interlocks can be installed at the discretion and responsibility of the installer.

All unit must be wired in accordance with I.E.E regulations for the Electrical Equipment of Buildings and the installer should ensure that a suitable isolating switch is connected in the mains supply.

Warning

For safety reasons a good earth connection must ALWAYS be made to the heater and control box.

1.3.1 Electronic controller

Electrically heated supply is 415V 3 phase, neutral and earth. Max cable inlet size is 6mm².

Ambient and LPHW supply is 230V 1 phase, neutral and earth. Max cable inlet size is 6mm².

Remote unit is wired to the base unit via a 3 core low volt cable. Networked air curtain interconnects via a 3 core low volt cable.

1.3.2 SmartElec controller

Electrically heated supply is 415V 3 phase, neutral and earth. Max cable inlet size is 4mm².

Remote unit is wired to the base unit via 2 pairs 24V Belden 8132 cable (or direct equiv).

Networked air curtain interconnects via 2 pairs 24V Belden 8132 cable (or direct equiv).

1.4 Location.

Airbloc units should be installed horizontally directly over the door opening. It is recommended that the air curtain is installed on the inside of the building, within the ceiling void or roof space.

Care must be taken to allow complete free air movement into the inlet grilles of the unit to ensure correct working operation of the air curtain. The discharge opening should be as close to the top of the door as possible and to cover the entire door width.

Units can be mounted adjacent to each other to cover the full door opening across wider entrances. Due to the in-built safety function of the motor, a switching slave panel must be used if using a singular switchbox.

1.5 Clearance distances

It is recommended that a minimum clearance of 100mm is allowed around the case sizes detailed below. The clearance allows for cable entry and prevents combustible surfaces overheating.

The minimum mounting height (floor to grille) is 1.8m. The recommended mounting height is 3m for standard and 4m for high capacity models.

1.6 Health and Safety

Sole liability rests with the installer to ensure that all site safety procedures are adhered to during installation.

Sole liability rests with the installer to ensure that protective safety wear such as hand, eye, ear and head protection is used during installation of the product.


Do not rest anything especially ladders against the product.

1.7 Standards

Units conform to the European electrical standard BS EN 60335-2-30:1997 and to the following European CE directives. 73/23/EEC low voltage; 89/336/EEC and 98/68/EEC electromagnetic compatibility.

2. Dimensions.

2.1 ACR Air Curtain

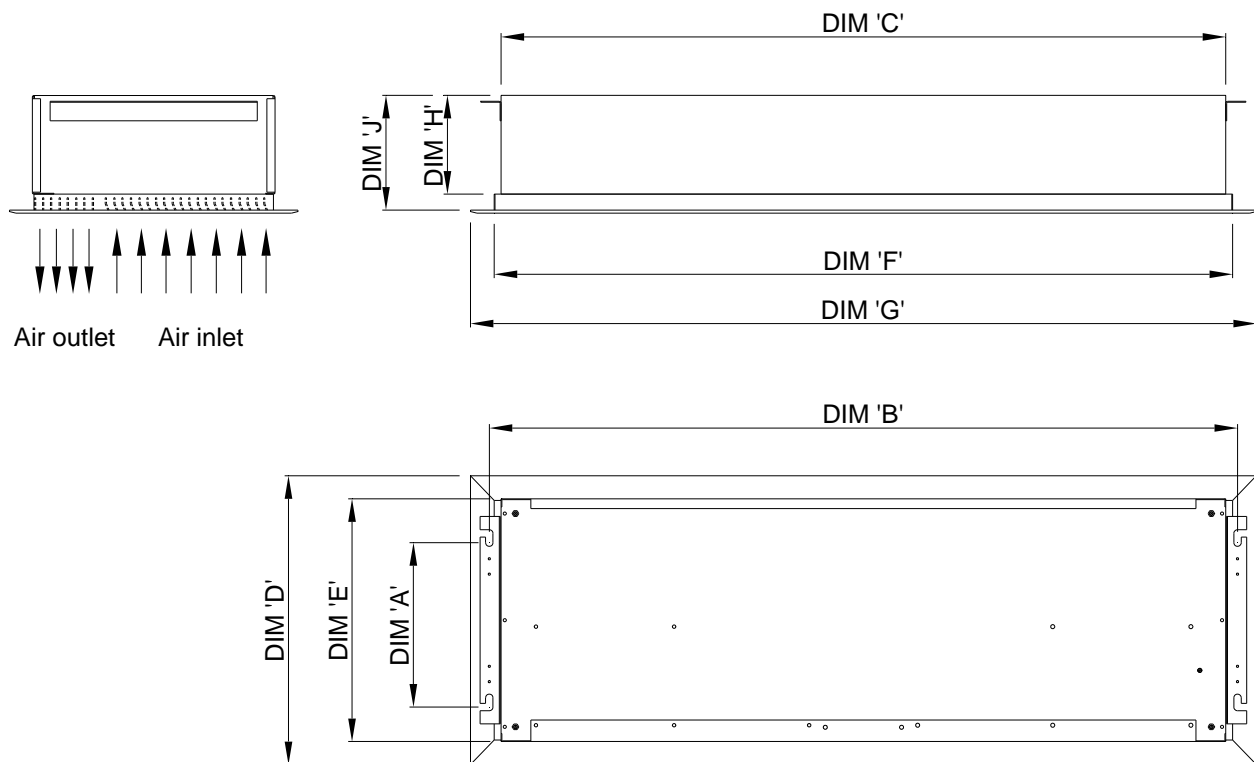

Dimensional detail (mm)

Size	ACR100SE6/9; ACR100SW9; ACR100SA	ACR150SE12; ACR150SW12; ACR150SA	ACR200SE18; ACR200SW18; ACR200SA	ACR120HE12; ACR120HW12; ACR120HA	ACR180HE18; ACR180HW18; ACR180HA
A	253			407	
B	1220	1520	2020	1185	1785
C	1182	1482	1982	1150	1750
D	395			550	
E	454			608	
F	1205	1505	2005	1150	1750
G	1242	1542	2095	1210	1810
H	160			227	
J	200			233	

2.2 Electronic Controller

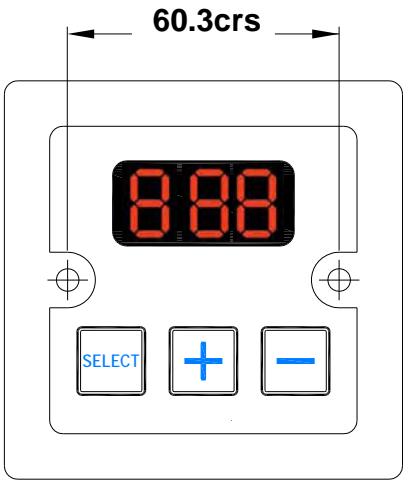


Fig.3. Surface mount





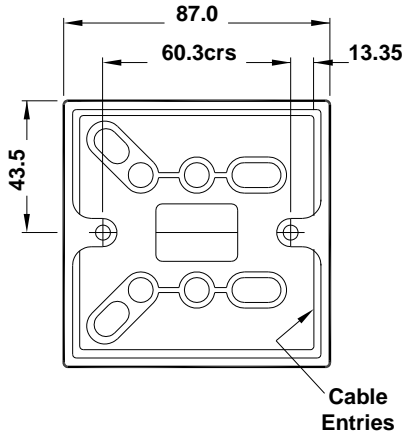


Fig.4. flush mount

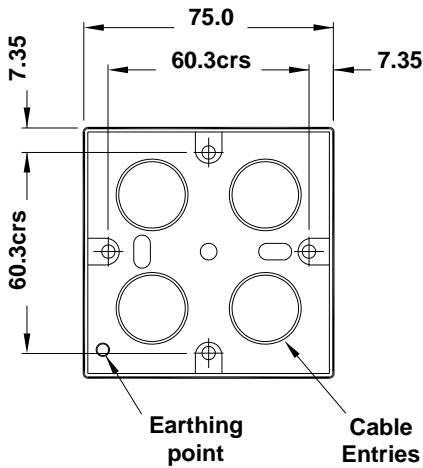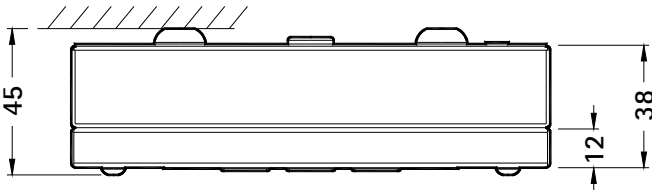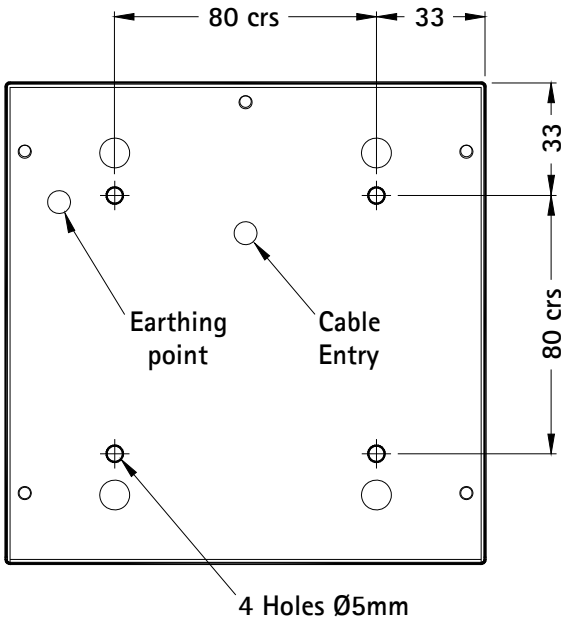

2.3 Optional SmartElec Controller dimensions

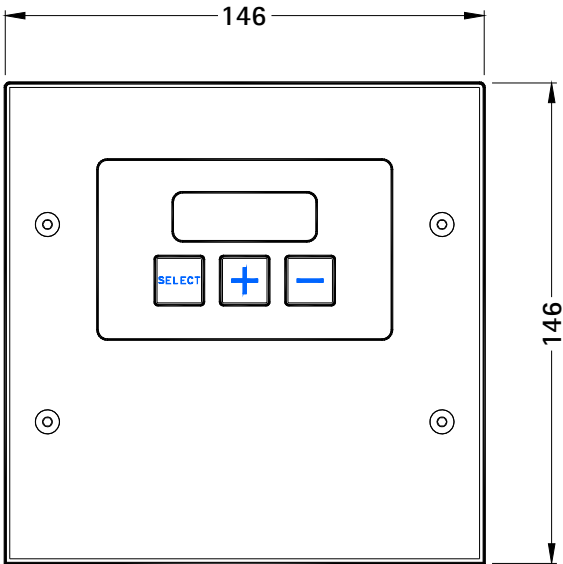

3. Technical Specification.

3.1			ACR100SE6	ACR100SE9	ACR150SE12	ACR200SE18
General Data						
Maximum height		M	3.0			
Heat medium			Electric heated			
Total heat		kW	6	9	12	18
Heat setting			2			
Heat setting		kW	3 / 6	4.5 / 9	6 / 12	9 / 18
Fan type			Crossflow			
Fan dia		mm	100			
Fan settings			2			
Air outlet			Fixed			
Switching type			Remote switchbox / SmartElec			
Weight		kg	28.0		34.0	49.0
Electrical Data						
Maximum heat capacity		kW	6	9	12	18
Supply voltage			230V 1ph 50Hz	415V 3ph 50Hz		
Total load		W	6100	9100	12100	18300
Cable size			2 x 6.0mm ² +E	4 x 2.5mm ² +E	4 x 4.0mm ² + Earth	
External fuse size amps		A/pha	30	15	20	30
Motor power		W	190			299
** Switch box		pt. no.	ASCP1-4			
Switch box wiring			6 x 1.0mm ² + Earth			
Mains terminal block position			Top middle - terminals N; L1; L2 & L3			
Control terminal block position			Top middle – terminals 1 - 5			
** SmartElec Energy Saving Control		pt. no.	102609			
SmartElec Energy Saving Control wiring			2 x pair Belden 8132 (or similar)			
Mains terminal block position			SmartElec Base Unit - terminals N; L1; L2 & L3			
Control terminal block position			SmartElec Base Unit - terminals A; B; 0V & 7V			
Air Data						
Fan setting			2			
Air volume	Low speed	m ³ /h	1164		1475	2013
	High speed	m ³ /h	1646		2085	2851
Air velocity	Low @ 0M	m/s	4.3			5.4
	High @ 0M	m/s	7.0			8.4
	High @ 1M	m/s	3.5			4.2
	High @ 2M	m/s	1.6			2.1
	High @ 3M	m/s	0.8			1.0
Delta T	Low speed	°C	17.6	26	25	21
	High speed	°C	13.3	20	19	
Noise level @ 1M	Low speed	dBA	59			
	High speed	dBA	64			
Dims Data						
Length		mm	1182		1482	1982
Depth (width)		mm	395			
Total height*		mm	200			
Outlet length		mm	1125		1425	1945
Outlet depth (width)		mm	85			
Grille height		mm	40			
Mounting bracket centres length		mm	1220		1520	2020
Side to 1 st bracket centre		mm	18			
Mounting bracket centres height		mm	Flush with top of unit			
Top to 1 st bracket centre		mm	Flush with top of unit			

* Suffix with S for metallic silver finish and W for white RAL9010 finish.

**Suffix with -SM for SmartElec Energy Saving Control.

3.2			ACR120HE12		ACR180HE18	
General Data						
Maximum height		M	4.0			
Heat medium			Electric heated			
Total heat		kW	12	18		
Heat setting			2			
Heat setting		kW	6 / 12	9 / 18		
Fan type			Crossflow			
Fan dia		mm	150			
Fan settings			2			
Air outlet			Fixed			
Switching type			Remote switchbox / SmartElec			
Weight		kg	38.0	55.0		
Electrical Data						
Maximum heat capacity		kW	12	18		
Supply voltage			415V 3ph 50Hz			
Total load		A	29.5	38.4		
Starting Current	Low speed amps	A/pha	26.8	34.6		
	High speed amps	A/pha	29.5	38.4		
Running current	Low speed amps	A/pha	25.6	34.5		
	High speed amps	A/pha	26.6	25.4		
Total load		W	29.5	38.4		
Cable size			4 x 6.0mm ² +Earth (MAX)			
External fuse size amps		A/pha	29.5	38.4		
Motor power		W	190			
** Switch box		pt. no.	ASCP1-4			
Switch box wiring			6 x 1.0mm ² + Earth			
Mains terminal block position			Top middle - terminals N; L1; L2 & L3			
Control terminal block position			Top middle – terminals 1 - 5			
** SmartElec Energy Saving Control		pt. no.	102609			
SmartElec Energy Saving Control wiring			2 x pair Belden 8132 (or similar)			
Mains terminal block position			SmartElec Base Unit - terminals N; L1; L2 & L3			
Control terminal block position			SmartElec Base Unit - terminals A; B; 0V & 7V			
Air Data						
Fan setting			2			
Air volume	Low speed	m ³ /h	2400	4100		
	High speed	m ³ /h	3300	5000		
Air velocity	Low @ 0M	m/s	8.5			
	High @ 0M	m/s	11.0			
	High @ 1M	m/s	5.5	5.2		
	High @ 2M	m/s	3.7	3.6		
	High @ 3M	m/s	2.5	2.4		
	High @ 4M	m/s	1.6	1.4		
Delta T	Low speed	°C	29	27		
	High speed	°C	23	20		
Noise level @ 1M	Low speed	dBA	55			
	High speed	dBA	60			
Dims Data						
Length		mm	1150	1750		
Depth (width)		mm	550			
Total height*		mm	227			
Outlet length		mm	1090	1690		
Outlet depth (width)		mm	85			
Grille height		mm	6			
Mounting bracket centres length		mm	1185	1785		
Side to 1 st bracket centre		mm	17.5			
Mounting bracket centres height		mm	Flush with top of unit			
Top to 1 st bracket centre		mm	Flush with top of unit			

3.3			ACR100SA	ACR150SA	ACR200SA
General Data					
Maximum height		M	3.0		
Heat medium			Ambient		
Fan type			Crossflow		
Fan dia		mm	100		
Fan settings			2		
Air outlet			Fixed		
Switching type			Remote switchbox		
Weight		kg	28	34	49
Electrical Data					
Supply voltage			230V 1ph 50Hz		
Total load		W	92	299	
Cable size			2 x 0.75mm ² + Earth		
External fuse size amps		A/pha	3		
Motor power		W	92	299	
Switch box		pt. no.	ASCP1-2		
Switch box wiring			4 x 0.75mm ² + Earth		
Mains terminal block position			Top middle - terminals N; L & E		
Control terminal block position			Top middle – terminals 1 & 2		
Air Data					
Fan setting			2		
Air volume	Low speed	m ³ /h	1164	1475	2013
	High speed	m ³ /h	1646	2085	2851
Air velocity	Low @ 0M	m/s	4.3		5.4
	High @ 0M	m/s	7.0		8.4
	High @ 1M	m/s	3.5		4.2
	High @ 2M	m/s	1.6		2.1
	High @ 3M	m/s	0.8		1.0
Noise level @ 1M	Low speed	dBA	62		
	High speed	dBA	66		
Dims Data					
Length		mm	1182	1482	1982
Depth (width)		mm	395		
Total height*		mm	200		
Outlet length		mm	1125	1425	1945
Outlet depth (width)		mm	85		
Grille height		mm	40		
Mounting bracket centres length		mm	1220	1520	2020
Side to 1 st bracket centre		mm	18		
Mounting bracket centres height		mm	Flush with top of the unit		
Top to 1 st bracket centre		mm	Flush with top of the unit		

* Suffix with S for metallic silver finish and W for white RAL9010 finish.

3.4			ACR120HA	ACR180HA
General Data				
Maximum height	M		4.0	
Heat medium			Ambient	
Total heat	kW	12		18
Heat setting			2	
Heat setting	kW	12		18
Fan type			Crossflow	
Fan dia	mm		150	
Fan settings			2	
Air outlet			Fixed	
Switching type			Remote switchbox	
Weight	kg	40.0		58.0
Electrical Data				
Maximum heat capacity	kW	12		18
Supply voltage			230V 1ph 50Hz	
Total load	A		2.5	
Starting Current	<i>Low speed amps</i>	A/pha	2.6	
	<i>High speed amps</i>	A/pha	3.1	
Running current	<i>Low speed amps</i>	A/pha	2.5	
	<i>High speed amps</i>	A/pha	1.8	
Cable size			4 x 0.75mm ² +Earth	
External fuse size amps	A		10	
Motor power	W		190	
Switch box	pt. no.		ASCP1-4	
Switch box wiring			4 x 0.75mm ² + Earth	
Mains terminal block position			Front right of centre - terminals L, N & E	
Control terminal block position			Front right of centre – terminals 1 - 2	
Air Data				
Fan setting			2	
Air volume	<i>Low speed</i>	m ³ /h	2400	4100
	<i>High speed</i>	m ³ /h	3300	5000
Air velocity	<i>Low @ 0M</i>	m/s	8.5	
	<i>High @ 0M</i>	m/s	11.0	
	<i>High @ 1M</i>	m/s	5.5	5.2
	<i>High @ 2M</i>	m/s	3.7	3.6
	<i>High @ 3M</i>	m/s	2.5	2.4
	<i>High @ 4M</i>	m/s	1.6	1.4
Delta T	<i>Low speed</i>	°C	29	27
	<i>High speed</i>	°C	23	20
Noise level @ 1M	Low speed	dBA	55	
	High speed	dBA	60	
Dims Data				
Length	mm	1150		1750
Depth (width)	mm		550	
Total height*	mm		227	
Outlet length	mm	1090		1690
Outlet depth (width)	mm		85	
Grille height	mm		6	
Mounting bracket centres length	mm	1185		1785
Side to 1 st bracket centre	mm		17.5	
Mounting bracket centres height	mm		Flush with top of unit	
Top to 1 st bracket centre	mm		Flush with top of unit	

3.5			ACR100SW9	ACR150SW12	ACR200SW18
General Data					
Maximum height		M	3.0		
Heat medium			LPHW		
Maximum heat capacity		kW	9	12	18
Heat setting			1		
Heat setting		kW	9	12	18
Fan type			Crossflow		
Fan dia		mm	100		
Fan settings			2		
Air outlet			Adjustable vent		
Switching type			Remote switchbox		
Weight		kg	28	34	49
Electrical Data					
Maximum heat capacity		kW	9	12	18
Supply voltage			230V 1ph 50Hz		
Total load		W	92	299	
Cable size			2 x 0.75mm ² + Earth		
External fuse size amps		A/pha	3		
Motor power		W	92	299	
Switch box		pt. no.	ASCP1-2		
Switch box wiring			4 x 0.75mm ² + Earth		
Mains terminal block position			Front right of centre - terminals N; L & E		
Control terminal block position			Front right of centre – terminals 1 & 2		
Air Data					
Fan setting			2		
Air volume	Low speed	m ³ /h	1164	1475	2013
	High speed	m ³ /h	1646	2085	2851
Air velocity	Low @ 0M	m/s	4.3		5.4
	High @ 0M	m/s	7.0		8.4
	High @ 1M	m/s	3.5		4.2
	High @ 2M	m/s	1.6		2.1
	High @ 3M	m/s	0.8		1.0
Delta T	Low speed	°C	26	25	21
	High speed	°C	20	19	
Noise level @ 1M	Low speed	dBA	59		62
	High speed	dBA	64		66
LPHW Data					
LPHW flow		l/s	0.20		0.40
Fluid pressure drop		kPA	3.8	17.6	20
Flow & return connection		mm	15		22
Inlet temp		°C	82		
Outlet temp		°C	71		
Dims Data					
Length		mm	1182	1482	1982
Depth (width)		mm	395		
Total height*		mm	200		
Outlet length		mm	1125	1425	1945
Outlet depth (width)		mm	85		
Grille height		mm	40		
Mounting bracket centres length		mm	1220	1520	2020
Side to 1 st bracket centre		mm	18		
Mounting bracket centres height		mm	Flush with top of the unit		
Top to 1 st bracket centre		mm	Flush with top of the unit		

* Suffix with S for metallic silver finish and W for white RAL9010 finish.

3.6			ACR120HW12	ACR180HW18
General Data				
Maximum height	M		4.0	
Heat medium			LPHW	
Total heat	kW		12	18
Heat setting			2	
Heat setting	kW		12	18
Fan type			Crossflow	
Fan dia	mm		150	
Fan settings			2	
Air outlet			Fixed	
Switching type			Remote switchbox	
Weight	kg		40.0	58.0
Electrical Data				
Maximum heat capacity	kW		12	18
Supply voltage			230V 1ph 50Hz	
Total load	A		2.5	
Starting Current	<i>Low speed amps</i>	A/pha	2.6	
	<i>High speed amps</i>	A/pha	3.1	
Running current	<i>Low speed amps</i>	A/pha	2.5	
	<i>High speed amps</i>	A/pha	1.8	
Cable size			4 x 0.75mm ² +Earth	
External fuse size amps	A		10	
Motor power	W		190	
Switch box	pt. no.		ASCP1-4	
Switch box wiring			4 x 0.75mm ² + Earth	
Mains terminal block position			Front right of centre - terminals L, N & E	
Control terminal block position			Front right of centre – terminals 1 - 2	
Air Data				
Fan setting			2	
Air volume	<i>Low speed</i>	m ³ /h	2400	4100
	<i>High speed</i>	m ³ /h	3300	5000
Air velocity	<i>Low @ 0M</i>	m/s	8.5	
	<i>High @ 0M</i>	m/s	11.0	
	<i>High @ 1M</i>	m/s	5.5	5.2
	<i>High @ 2M</i>	m/s	3.7	3.6
	<i>High @ 3M</i>	m/s	2.5	2.4
	<i>High @ 4M</i>	m/s	1.6	1.4
Delta T	<i>Low speed</i>	°C	29	27
	<i>High speed</i>	°C	23	20
Noise level @ 1M	Low speed	dBA	55	
	High speed	dBA	60	
LPHW Data				
LPHW Flow	l/s		0.40	0.53
Fluid Pressure Drop	kPA		23	24
Floe & Return connection	mm		15	15
Inlet temp	°C		55	
Outlet temp	°C		60	
Dims Data				
Length	mm		1150	1750
Depth (width)	mm		550	
Total height*	mm		227	
Outlet length	mm		1090	1690
Outlet depth (width)	mm		85	
Grille height	mm		6	
Mounting bracket centres length	mm		1185	1785
Side to 1 st bracket centre	mm		17.5	
Mounting bracket centres height	mm		Flush with top of unit	
Top to 1 st bracket centre	mm		Flush with top of unit	

3.7	Electronic Controller
General Data	
Sensor input	NTC
Control Setpoint	16 to 35 °C in steps of 1 degree
Temperature Control	Proportional with 1°C hysteresis
Minimum Power	30% to 99 %
Cycle time	0.3 seconds fixed
Protection	2 x high speed fuse for the protection of the heater switching devices
Fan Output	3 off Relay for High, Medium and Low Fan setting 3A max 240Vac
Connection	Screw terminals 4 for supply, 3 for heater output, 4 for fan output, 2 for sensor input, 2 for external thermal trip
Supply	415 Vrms +/-15% 50/60Hz 5VA max.
Dimensions	Program panel 88mm(L) x 88mm(W) max.
Mounting positions	Program panel fixing centres 60.3mm
Temperature	0 to 50 °C operating; -20 to 65 °C storage
Display	Three 7-segment LCD red for parameter display
Push buttons	3 positive feedback tactile push buttons

3.8	SmartElec Controller
General Data	
Sensor input	NTC
Control Setpoint	16 to 35 °C in steps of 1 degree
Temperature Control	Proportional with 1°C hysteresis
Minimum Power	30% to 99 %
Cycle time	0.3 seconds fixed
Protection	2 x high speed fuse for the protection of the heater switching devices
Fan Output	3 off Relay for High, Medium and Low Fan setting 3A max 240Vac
Connection	Screw terminals 4 for supply, 3 for heater output, 4 for fan output, 2 for sensor input, 2 for external thermal trip
Supply	415 Vrms +/-15% 50/60Hz 5VA max.
Dimensions	Program panel 101mm(L) x 101mm(W) x 60mm(D) max.
Mounting positions	Program panel fixing centres 80mm x 80mm
Temperature	0 to 50 °C operating; -20 to 65 °C storage
Display	Three 7-segment LCD red for parameter display
Push buttons	3 positive feedback tactile push buttons

4. Wiring Diagrams.

4.1 Installer Wiring - Electrically Heated 9 & 12kW ONLY


The program panel is connected to the base unit via a set of 3 way connectors marked "+12V", "DATA" and "GND". Interconnecting wiring is **via Belden** cable as shown. **Max length 50m.**

It is recommended that this control cable is run separately within its own trunking to avoid external interference.

Door switch to be volt free and wired normally closed i.e. broken when door is open.

External switch (ie BMS enable) to be volt free and wired via normally open contacts.

Internal/External sensor bead to be wired low voltage.

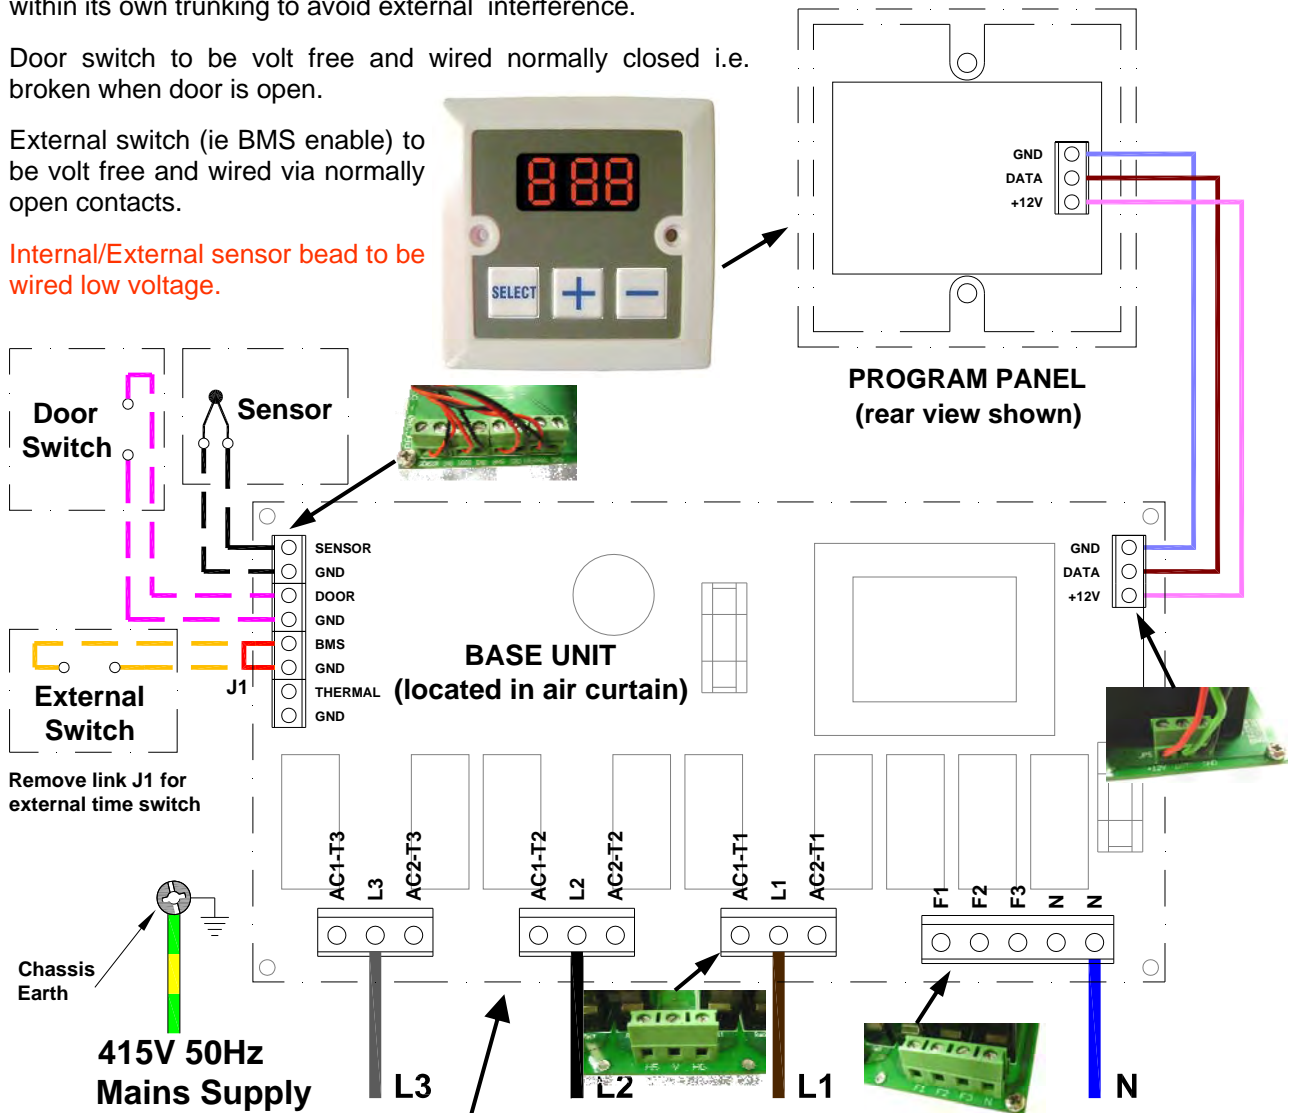

Protection

External circuit breaker with the appropriate rating should be installed for the protection of the installation.

Terminal	Description	Cable
N	Neutral	4mm ² max
L1	3 phase supply	4mm ² max
L2	3 phase supply	4mm ² max
L3	3 phase supply	4mm ² max
12V	Supply to remote unit	
DATA	Supply to remote unit	
GND	0v Terminal	
DOOR	option Door Contact	
BMS	option BMS switch	
SENSOR	option Internal/External Sensor	
GND(s)	option 0v terminals	

4.2 Installer Wiring - Electrically Heated 18 & 24kW ONLY


The program panel is connected to the base unit via a set of 3 way connectors marked "+12V", "DATA" and "GND". Interconnecting wiring is **via Belden** cable as shown. **Max length 50m.**

It is recommended that this control cable is run separately within its own trunking to avoid external interference.

Door switch to be volt free and wired normally closed i.e. broken when door is open.

External switch (ie BMS enable) to be volt free and wired via normally open contacts.

Internal/External sensor bead to be wired low voltage.

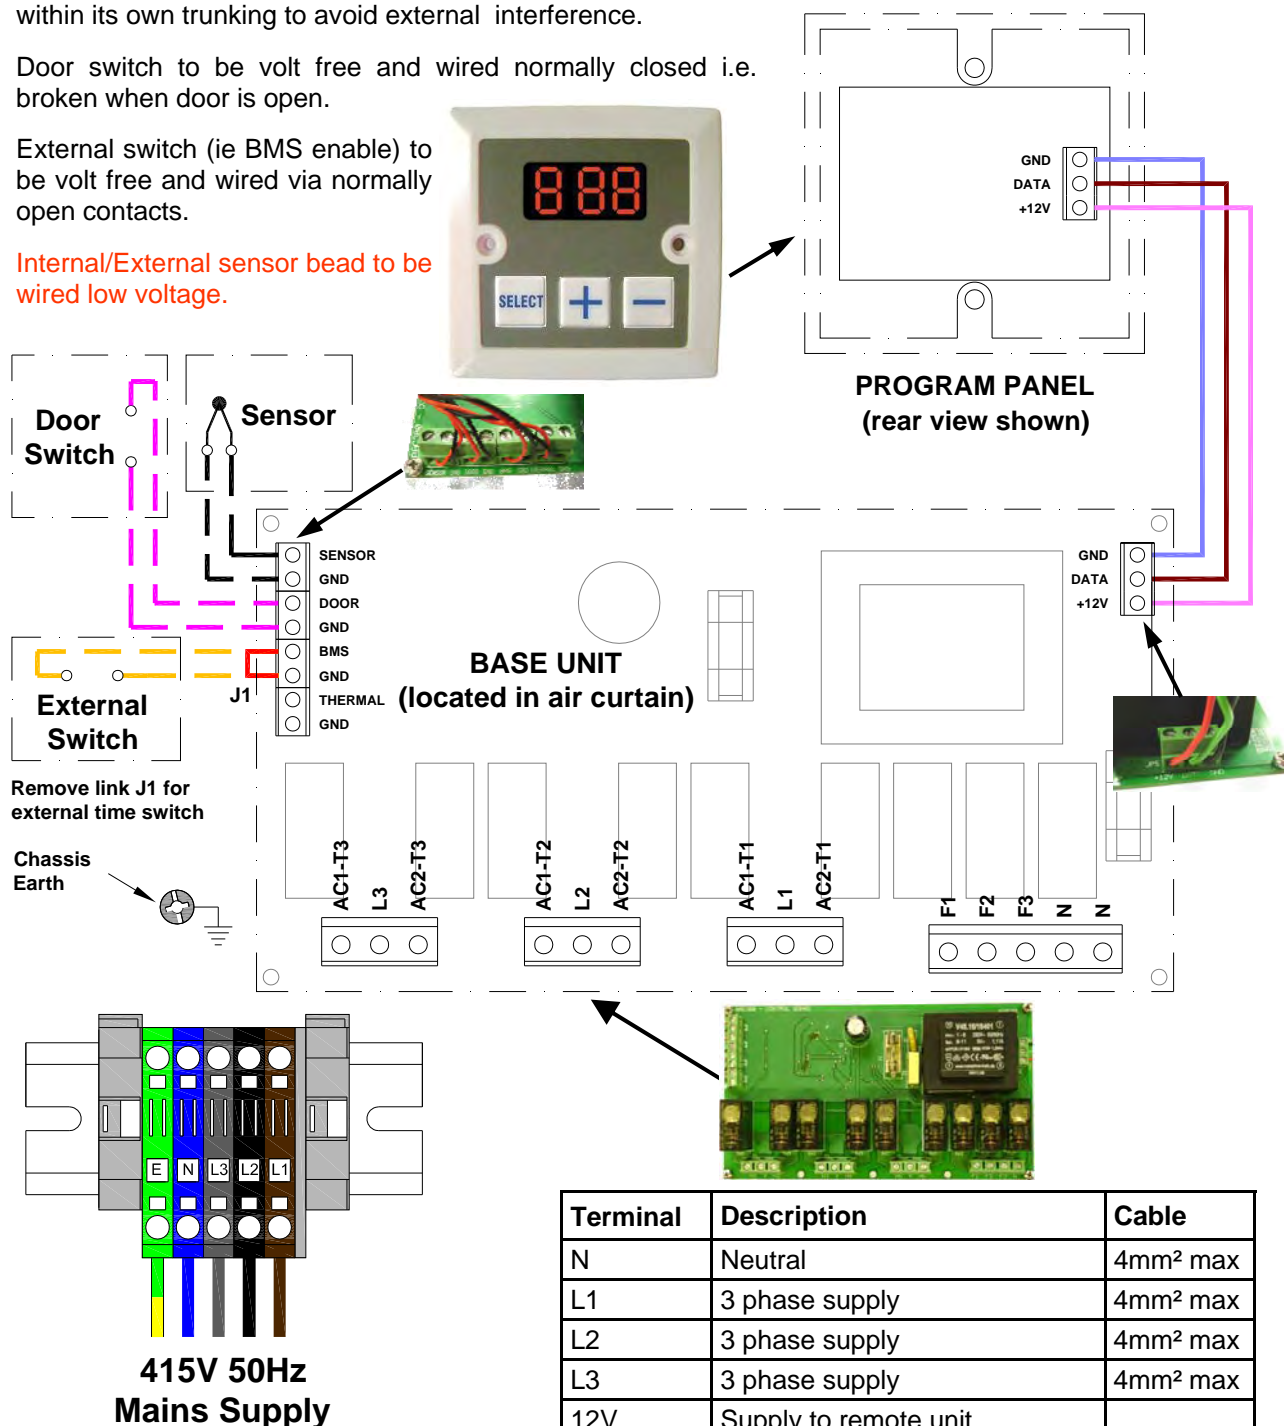

Protection

External circuit breaker with the appropriate rating should be installed for the protection of the installation.

Terminal	Description	Cable
N	Neutral	4mm ² max
L1	3 phase supply	4mm ² max
L2	3 phase supply	4mm ² max
L3	3 phase supply	4mm ² max
12V	Supply to remote unit	
DATA	Supply to remote unit	
GND	0v Terminal	
DOOR	option Door Contact	
BMS	option BMS switch	
SENSOR	option Internal/External Sensor	
GND(s)	option 0v terminals	

4.3 Installer Wiring - Ambient


The program panel is connected to the base unit via a set of 3 way connectors marked "+12V", "DATA" and "GND". Interconnecting wiring is via **Belden cable** as shown. **Max length 50m.**

It is recommended that this control cable is run separately within its own trunking to avoid external interference.

Door switch to be volt free and wired normally closed i.e. broken when door is open.

External switch (ie BMS enable) to be volt free and wired via normally open contacts.

Internal/External sensor bead to be wired low voltage.

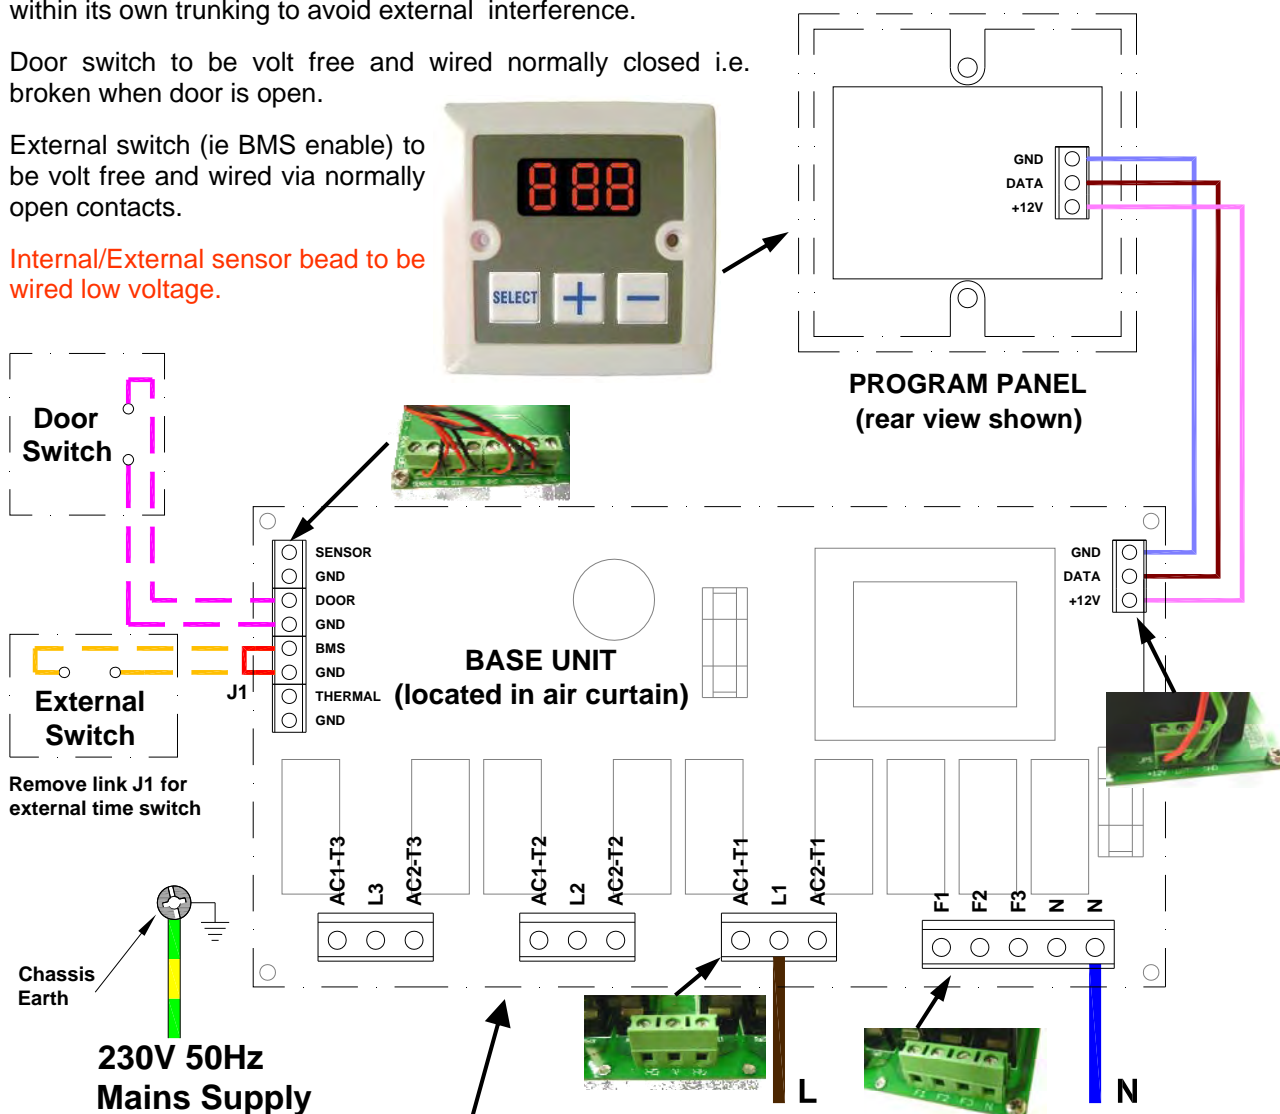

Protection

External circuit breaker with the appropriate rating should be installed for the protection of the installation.

Terminal	Description	Cable
N	Neutral	4mm ² max
L	3 phase supply	4mm ² max
12V	Supply to remote unit	
DATA	Supply to remote unit	
GND	0v Terminal	
DOOR	option Door Contact	
BMS	option BMS switch	
GND(s)	option 0v terminals	

4.4 Installer Wiring - LPHW


The program panel is connected to the base unit via a set of 3 way connectors marked "+12V", "DATA" and "GND". Interconnecting wiring is via **Belden cable** as shown. **Max length 50m.**

It is recommended that this control cable is run separately within its own trunking to avoid external interference.

Door switch to be volt free and wired normally closed i.e. broken when door is open.

External switch (ie BMS enable) to be volt free and wired via normally open contacts.

Internal/External sensor bead to be wired low voltage.

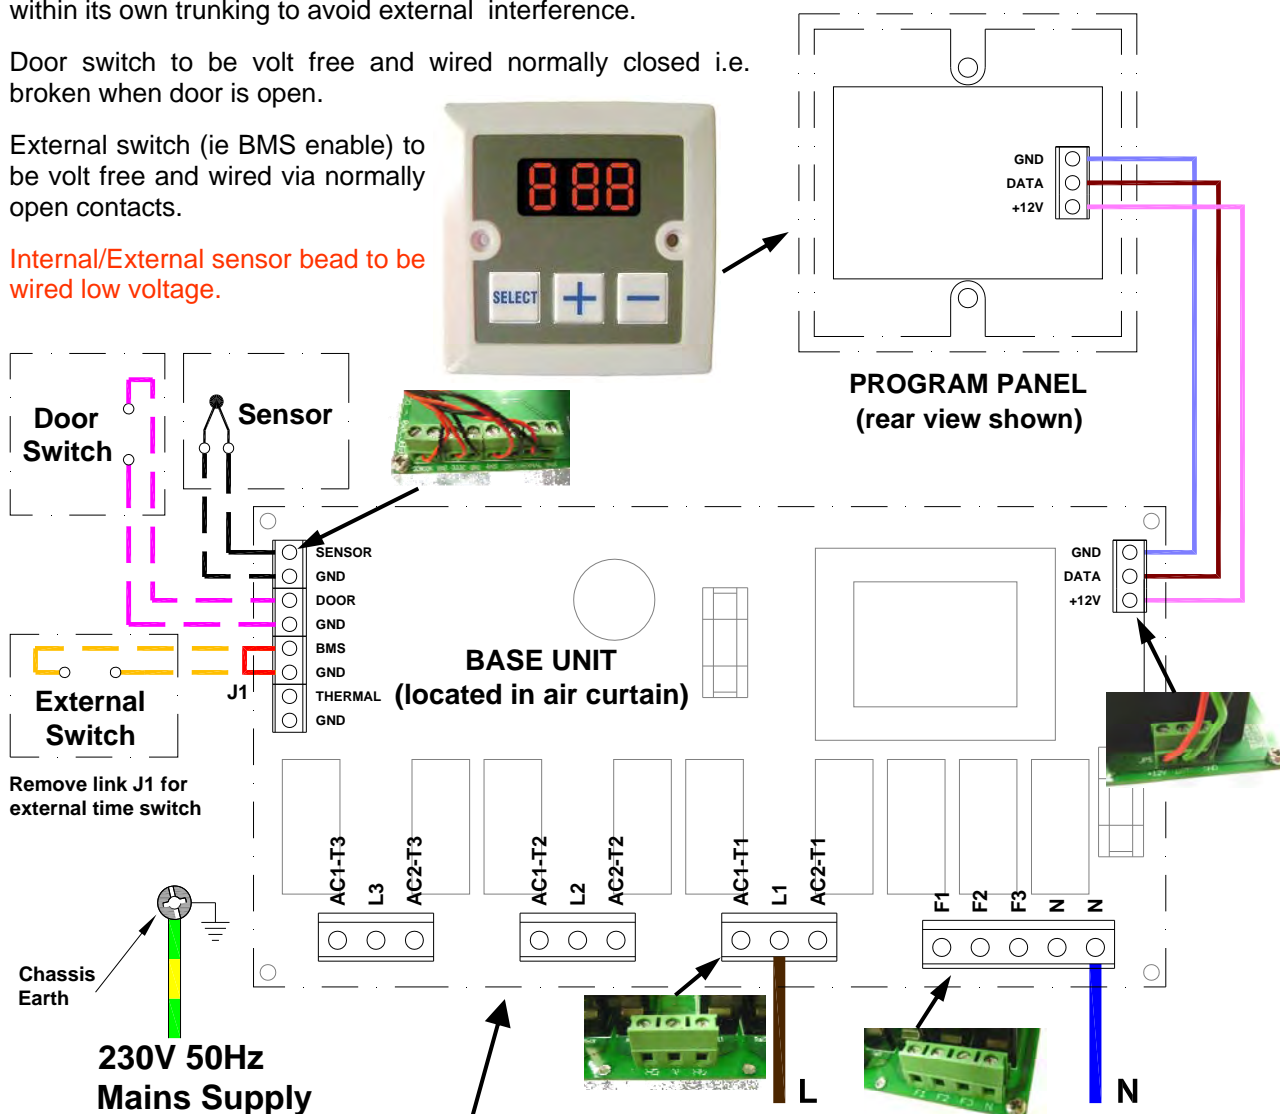


Protection

External circuit breaker with the appropriate rating should be installed for the protection of the installation.

Terminal	Description	Cable
N	Neutral	4mm ² max
L	3 phase supply	4mm ² max
12V	Supply to remote unit	
DATA	Supply to remote unit	
GND	0v Terminal	
DOOR	option Door Contact	
BMS	option BMS switch	
SENSOR	option Internal/External Sensor	
GND	option 0v terminals	

4.5 Factory Wiring - Electrically heated 9 & 12kW ONLY

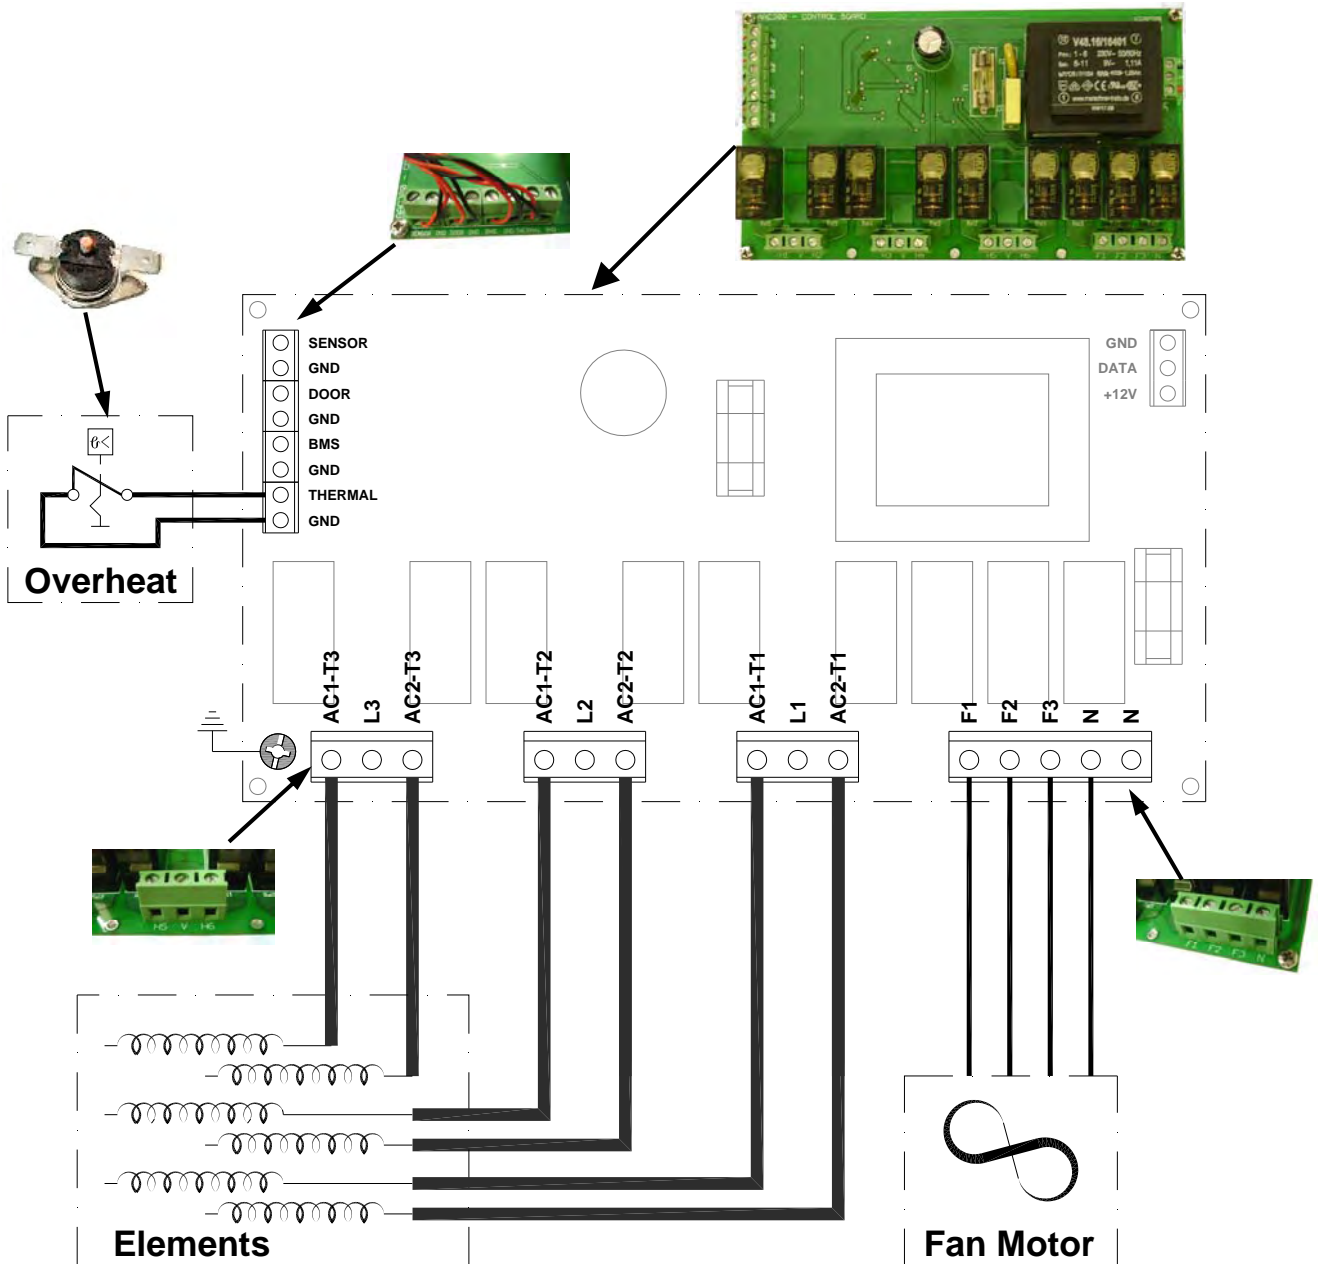


Terminal	Description
AC1/2-T1	Heater Elements phase 1
AC1/2-T2	Heater Elements phase 2
AC1/2-T3	Heater Elements phase 3
N	Neutral to fan
F1	Fan - low speed
F2	Fan - medium speed
F3	Fan - high speed
THERMAL	Thermal Overheat trip
GND	0v Terminal

The element output is connected to the right and left side of each terminal block marked "AC1-T1", "AC2-T1", "AC1-T2", "AC2-T2", "AC1-T3" and "AC2-T3"

The fan output is connected to a 4 way connector marked "N", "F1", "F2" and "F3".

The thermal trip is connected to a 2 way connector marked "THERMAL" & "GND"

4.6 Factory Wiring - Electrically heated 18 & 24kW ONLY

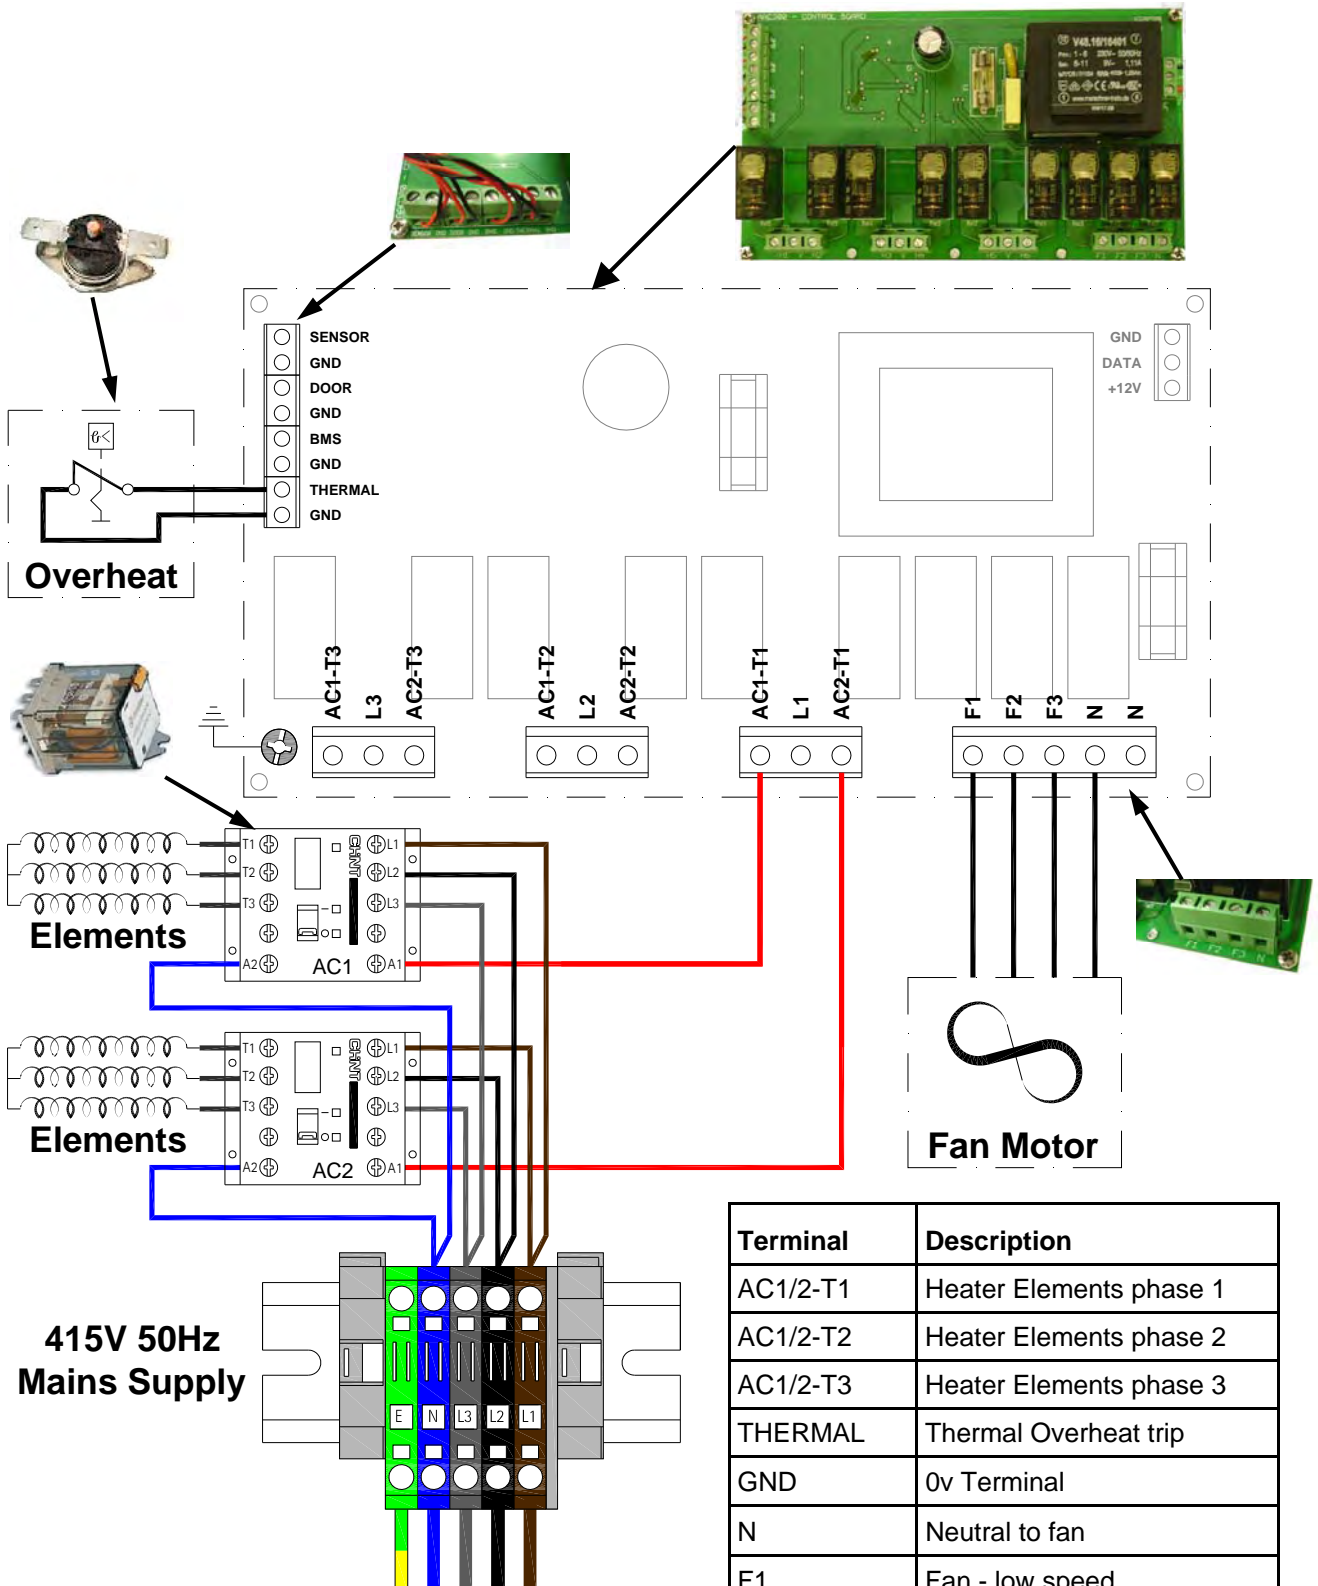


The element outputs are connected to contactors "AC1" and "AC2" on terminals T1, T2 and T3.

The fan output is connected to a 4 way connector marked "N", "F1", "F2" and "F3".

The thermal trip is connected to a 2 way connector marked "THERMAL" & "GND"


4.7 Factory Wiring - Ambient

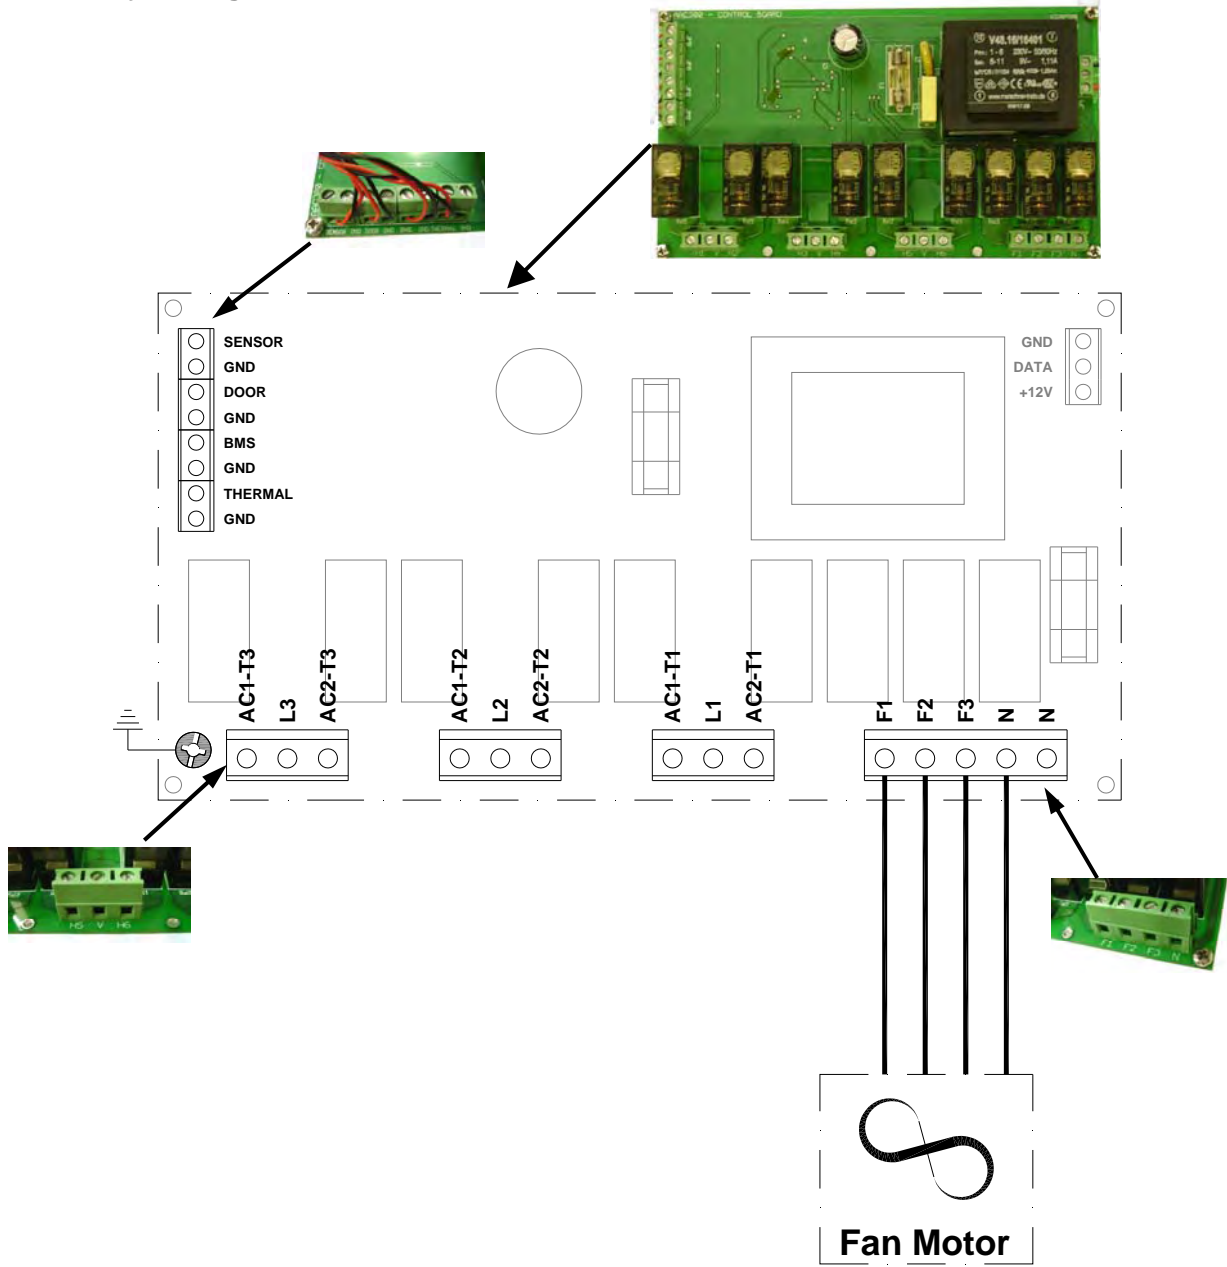

Terminal	Description
N	Neutral to fan
F1	Fan - low speed
F2	Fan - medium speed
F3	Fan - high speed

The fan output is connected to a 4 way connector marked "N", "F1", "F2" and "F3".

4.8 Factory Wiring - LPHW

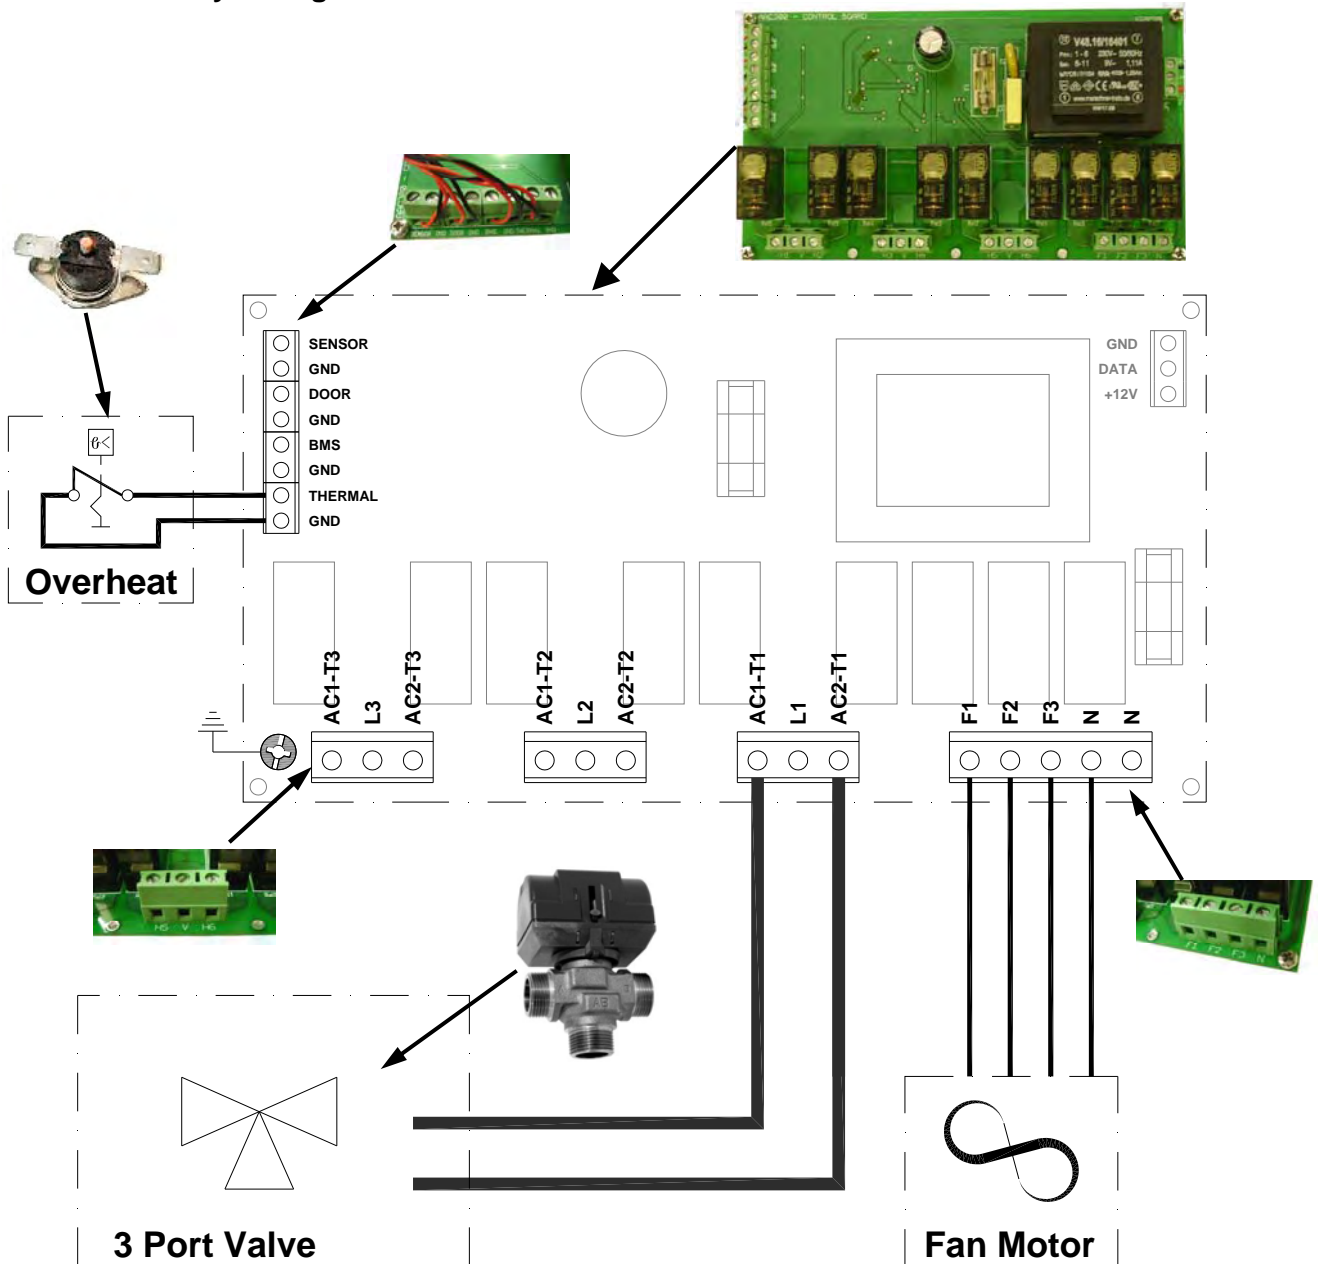


Terminal	Description
N	Neutral to fan
F1	Fan - low speed
F2	Fan - medium speed
F3	Fan - high speed
THERMAL	Thermal Overheat trip
GND	0v Terminal


The fan output is connected to a 4 way connector marked "N", "F1", "F2" and "F3".

The thermal trip is connected to a 2 way connector marked "THERMAL" & "GND"


4.9 Network Wiring - Electronic controller

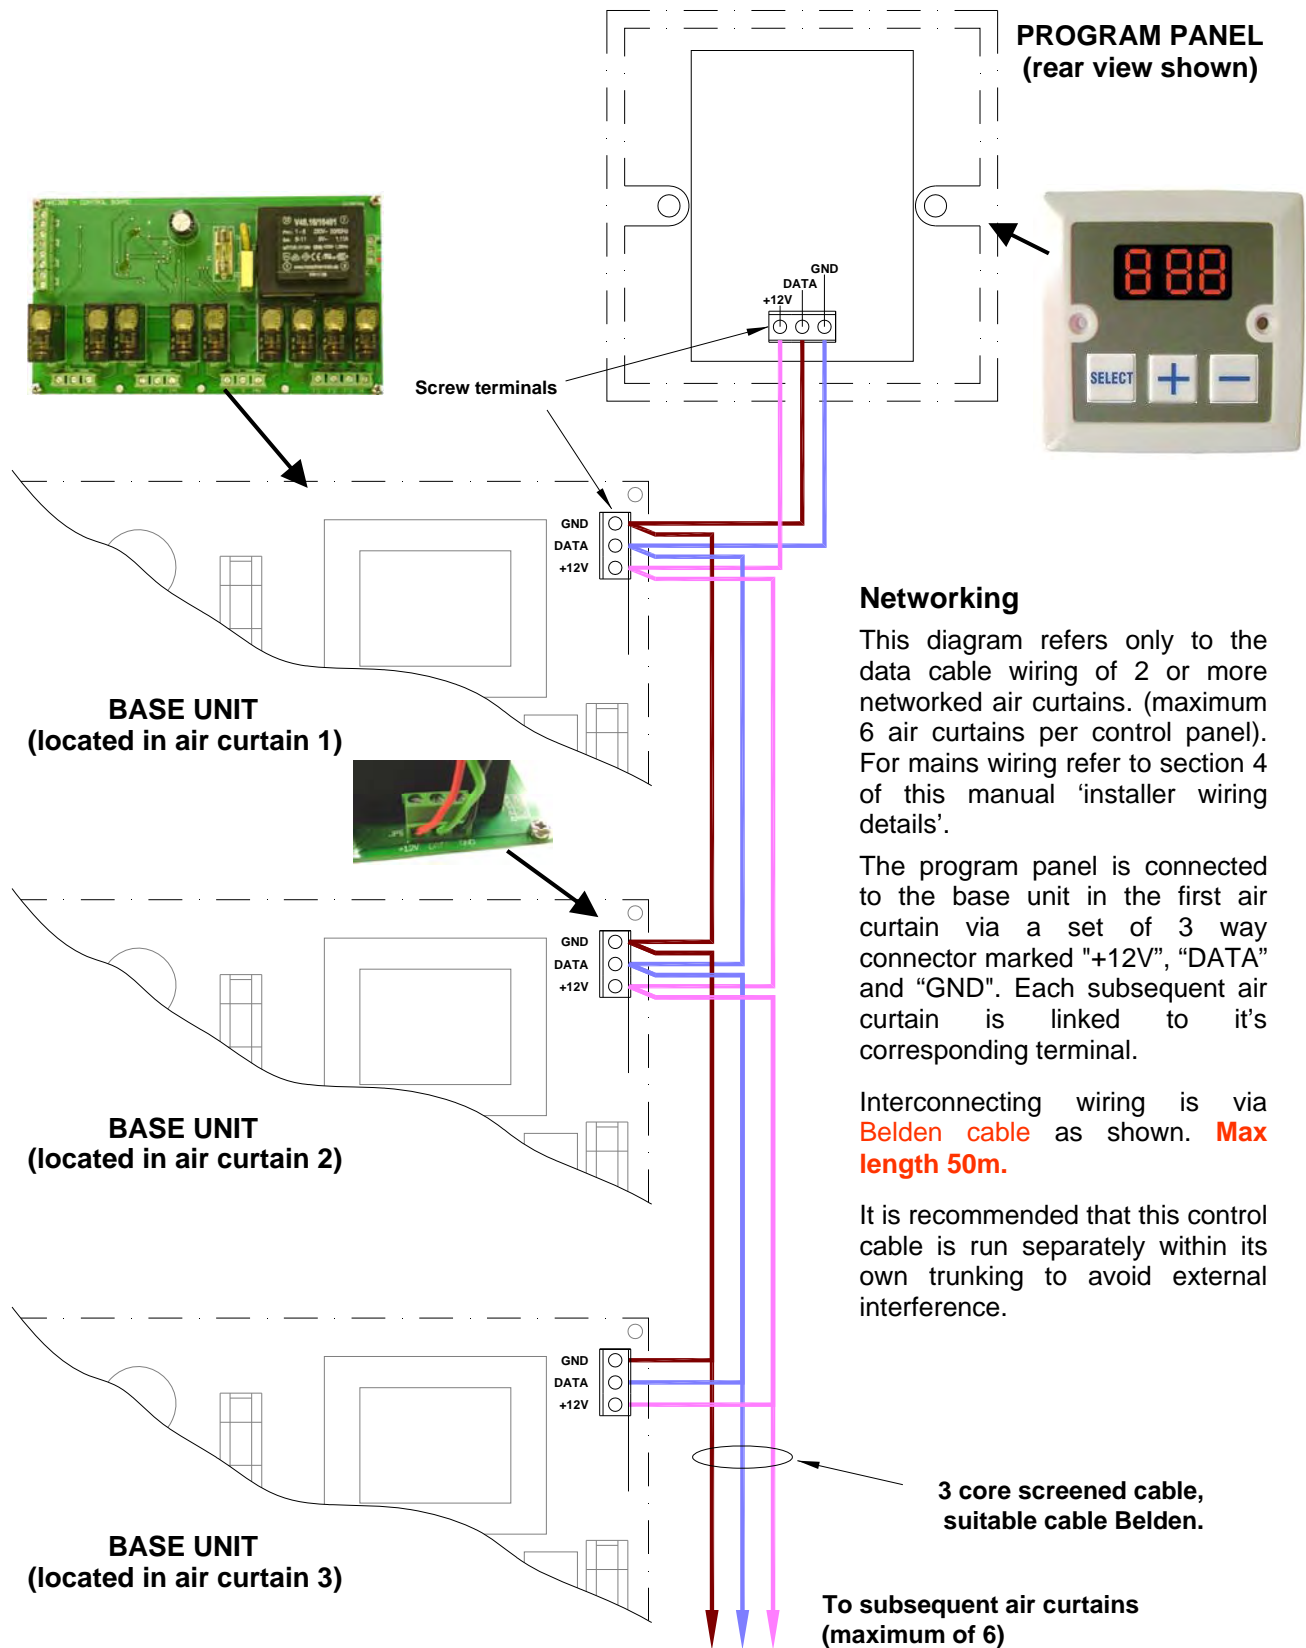

4.10 Installer wiring diagram Electrically Heated with SmartElec control.

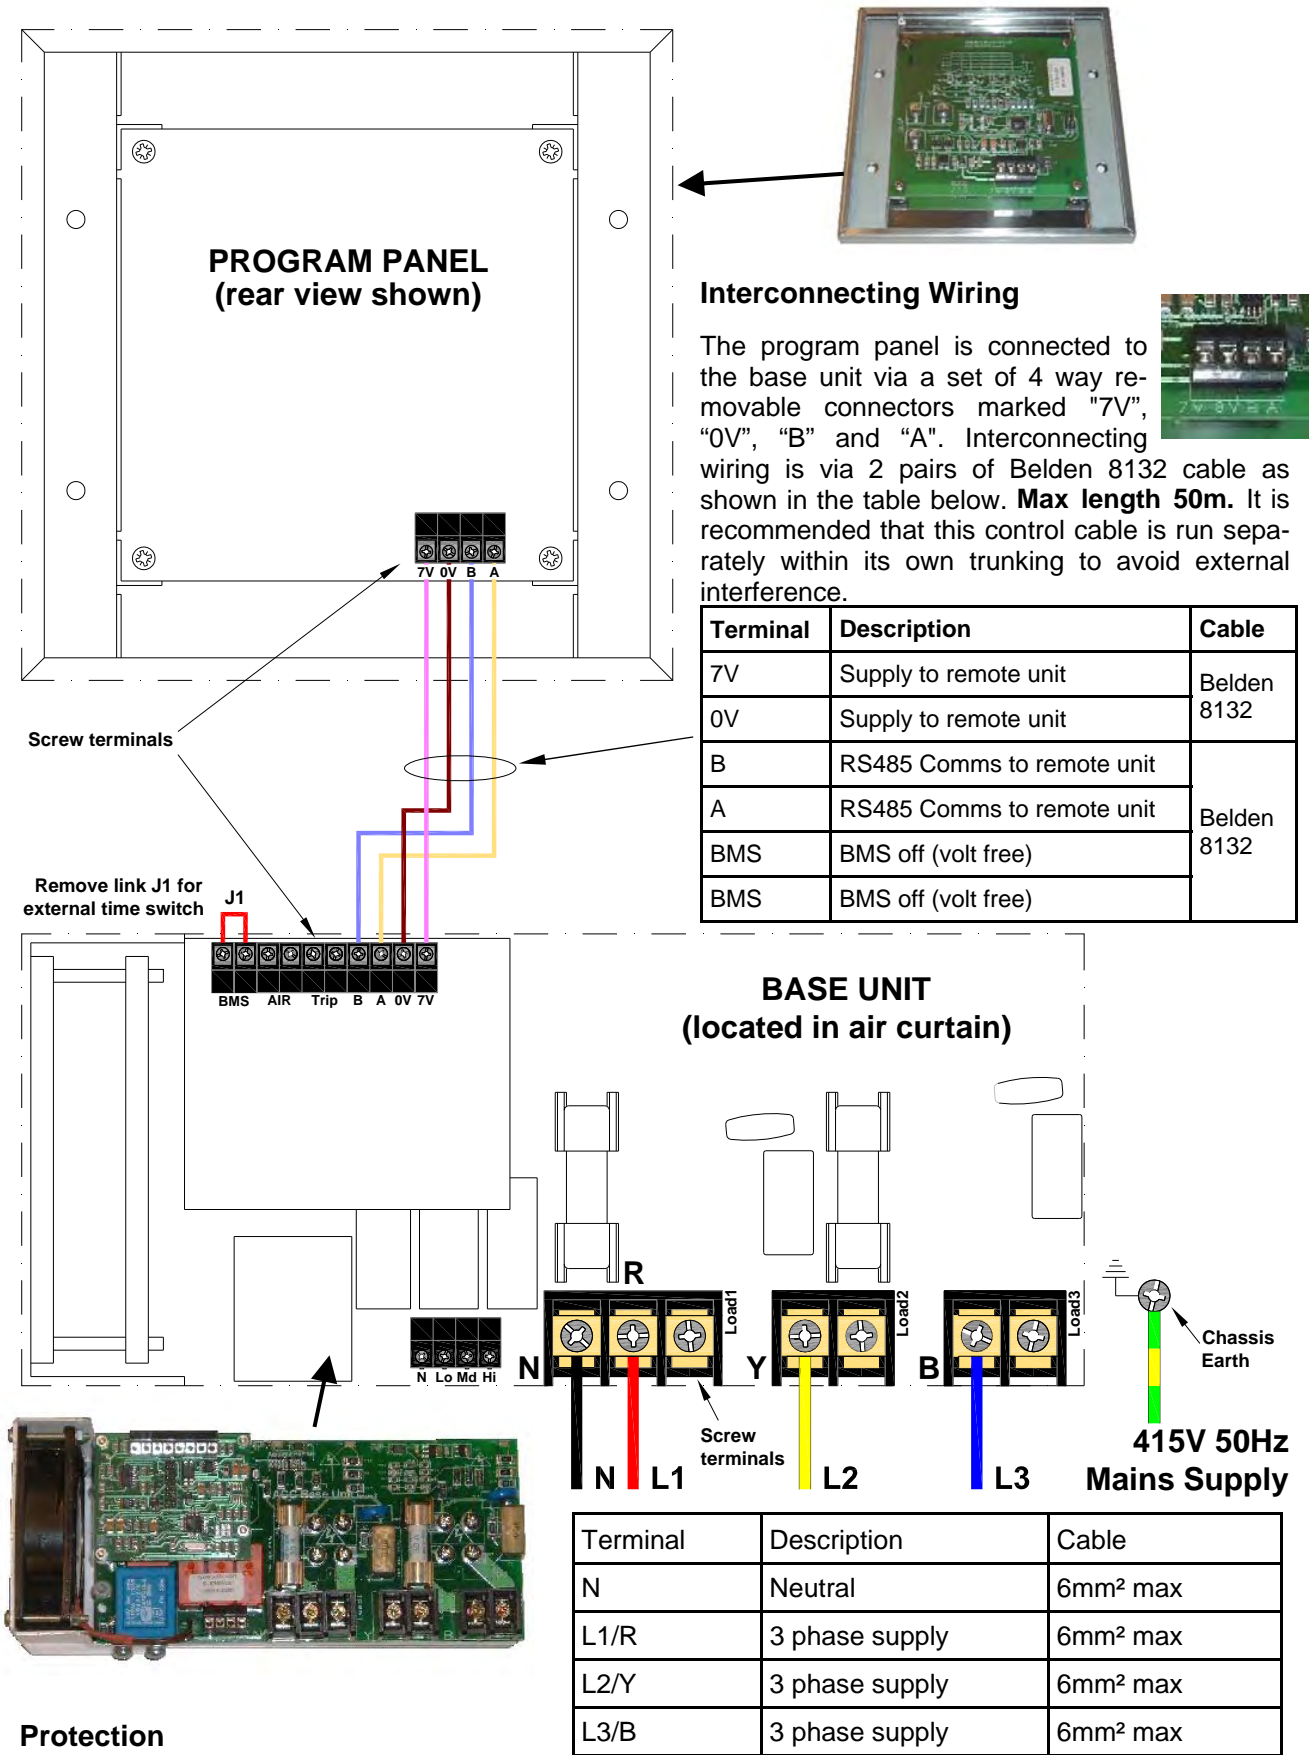


4.11 Factory installed wiring. Electrically Heated with SmartElec control.

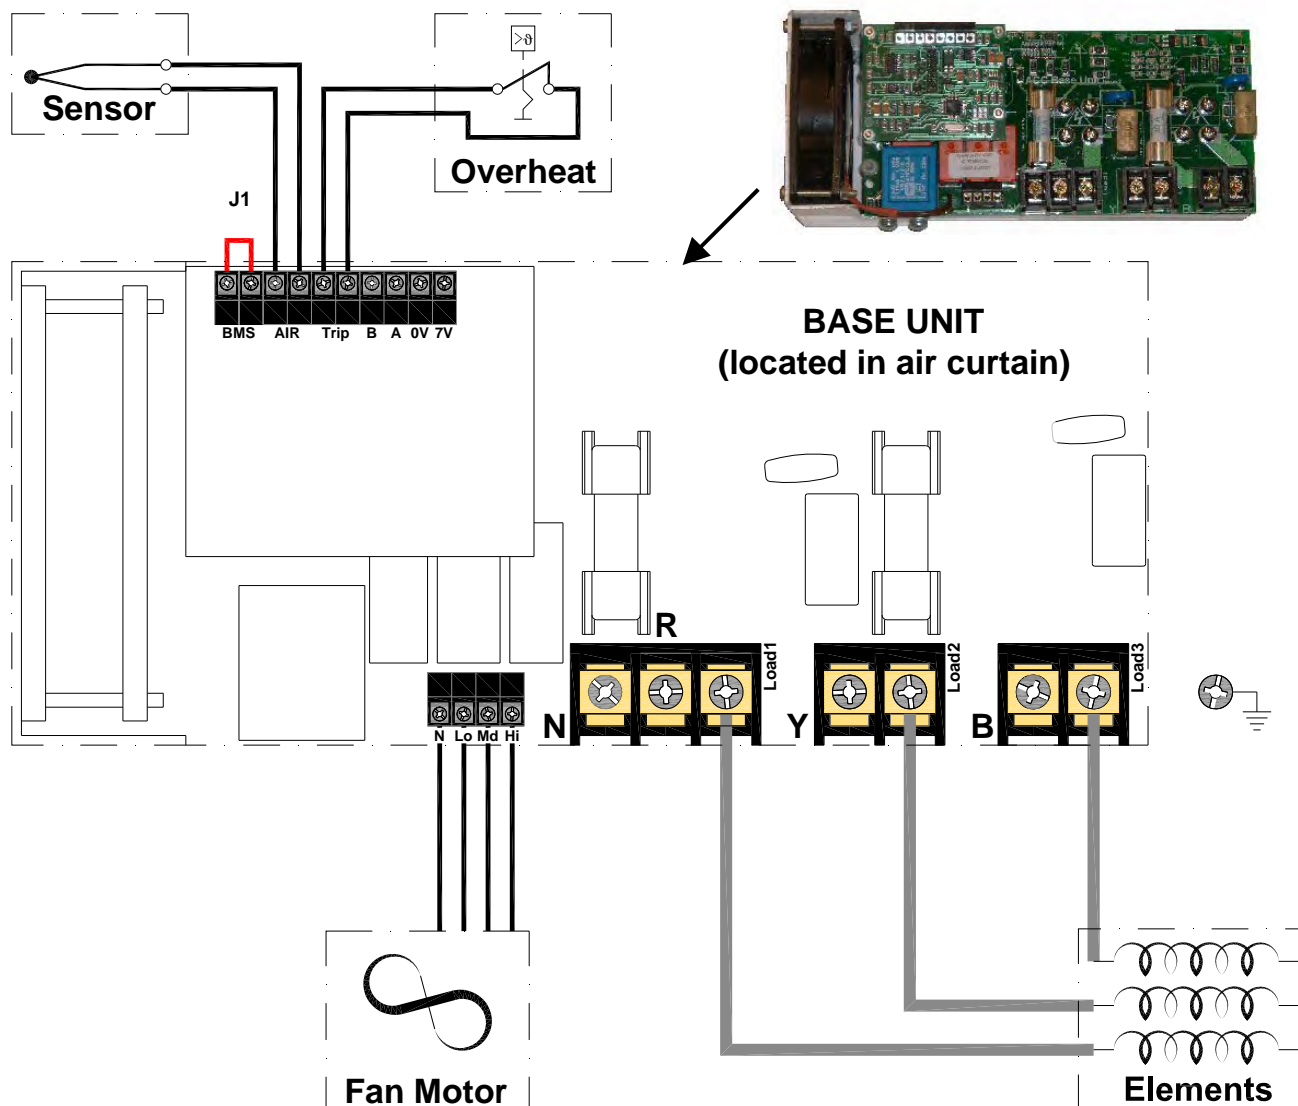

Terminal	Description
Load1	Heater phase 1
Load2	Heater phase 2
Load3	Heater phase 3
N	Neutral to fan
Lo	Fan - low speed
Md	Fan - medium speed
Hi	Fan - high speed
AIR	Air sensor (non-polarised)
AIR	Air sensor (non-polarised)
Trip	Ext thermal trip, n.c. (volt-free)
Trip	Ext thermal trip, n.c. (volt-free)
BMS	BMS off (volt -free)
BMS	BMS off (volt -free)

The heater output is connected to the right hand side of each terminal block marked "Load1", "Load2" and "Load3".

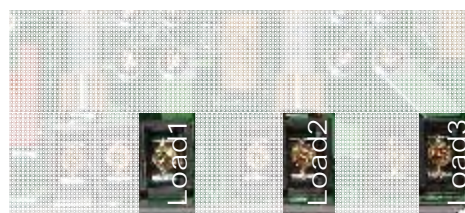


The fan output is connected to a 4 way connector marked "N", "Lo", "Md" and "Hi".

The sensor input (air sensor) is connected to a 2 way connector marked "AIR" on the base unit. The sensor is not polarity sensitive.

The external thermal trip (volt-free contact) is connected to a 2 way connector marked "Trip". The connection is not polarity sensitive.

After removing link J1, the BMS pair can be used for external time control via a pair of volt free contacts.

4.12 Network wiring Electrically Heated SmartElec control.

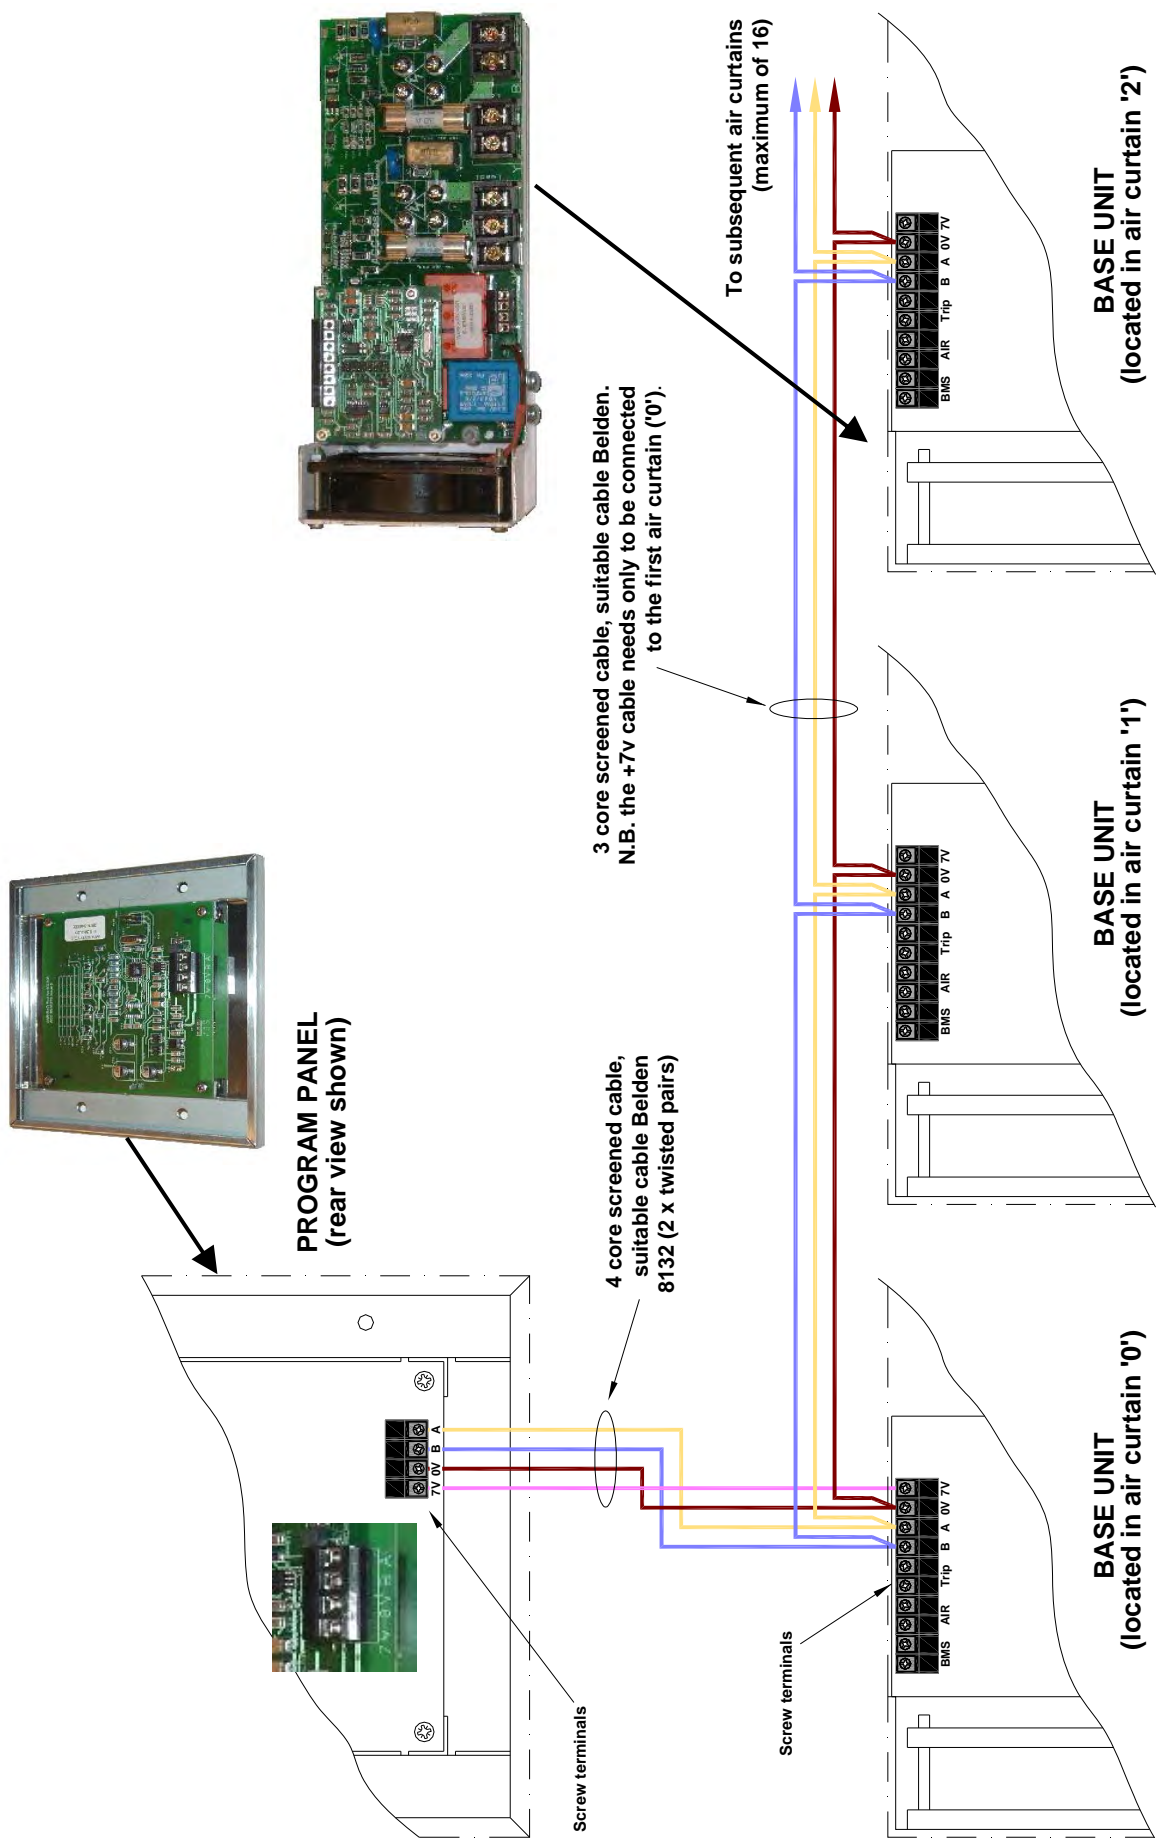

5. Installation Details.

5.1 Mounting

Airbloc units should be installed horizontally directly over the door opening. It is recommended that the air curtain is installed on the inside of the building, within the open room space against a wall or ceiling.

Care must be taken to allow complete free air movement into the inlet grilles of the unit to ensure correct working operation of the air curtain. The discharge opening should be as close to the top of the door as possible and to cover the entire door width.

Units can be mounted adjacent to each other to cover the full door opening across wider entrances. Due to the in-built safety function of the motor, a switching slave panel must be used if using a singular switchbox.

These units are designed for surface mounting and should not be placed into a ceiling void, due to possible obstruction of airflow and difficulty in routine cleaning and maintenance.

5.2 Electrical Supply.

These units are suitable for connection to a 415 Volt, 50Hz 3 phase and neutral supply for Electrically heated 9-24kW models or 230/240 Volt 50 Hz single phase ac supply for Electrically heated 6kW, Ambient and LPHW models.

Electrically heated models consume 6kW at 230 volts and 9kW, 12kW, 18kW & 24kW at 415 volts when switched to the full heat position depending on their model and capacity size .

The appliance shall be connected to the supply via an appropriate switched fused double pole isolator having a contact separation of greater than 3mm. Test for correct operation and refit the cover.

For connection to the mains supply it will be necessary to open the hinged lid from the unit. The base unit is located on a base plate. It will be necessary to connect the mains supply and the lead from the remote key pad prior to refitting the cover. Wire in accordance to diagrams in section 4.1 to 4.7

For optional SmartElec controller, wire as shown in diagrams 4.10 to 4.12

For safety reasons, a sound earth connection must always be made to the unit before it is put to

use. The unit should be wired in accordance with IEE Regulations for the Electrical Equipment of Buildings.

5.3 Installation.

It is the sole responsibility of the installer to ensure that the points of attachment to the building are sound. Consultation with the consultant/architect or owner of the building is recommended to ensure that a sound, mechanically stable installation is achieved.

All attachments must be capable of supporting the weight of the product detailed in Section 1.


Step 1

Before fitting or wiring the air curtain, ensure casing faces as below and see general installation guidance notes.




Step 2

Using a pozidrive screwdriver remove the M5 screws at the side of the grille.

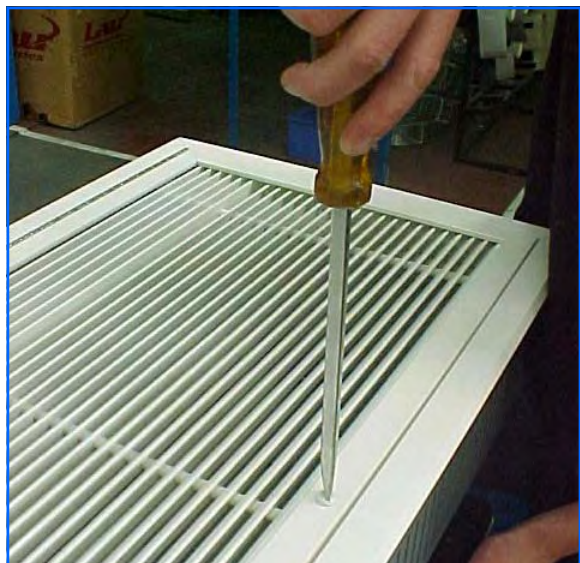


Step 3

Access to the inside of the air curtain grille can be made. Open the grille. The grille is hinged to prevent the inner frame from dropping.

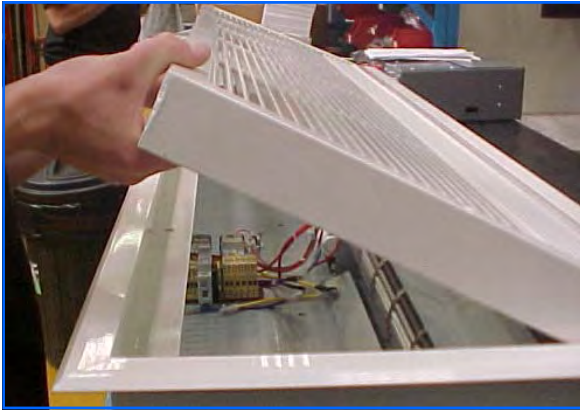

Step 4

The grille assembly can now be removed from the case to allow fitting of the product in the ceiling recess. Remove the screws from the outer frame to the top of the product case.

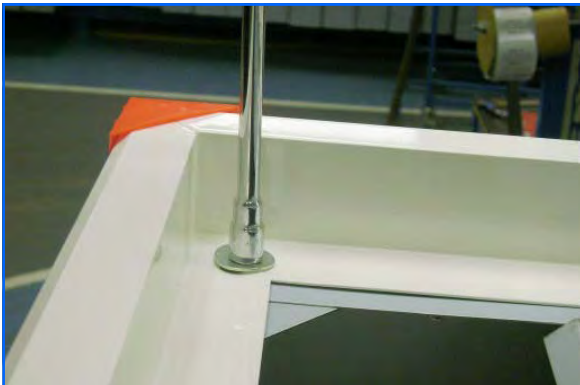

Step 5



Attachment of the air curtain to the ceiling structure is by means of the two brackets attached to the side of the air curtain. The brackets may be removed to assist in passing the air curtain through the recess then reattached when in-situ.



Step 6


Either drop rods or catenary wire (available from manufacturer) can be used to fasten the air curtain to the ceiling support structure.

Note When using drop rods the casing mounting brackets are slotted and the mounting plates provided must be used on assembly.

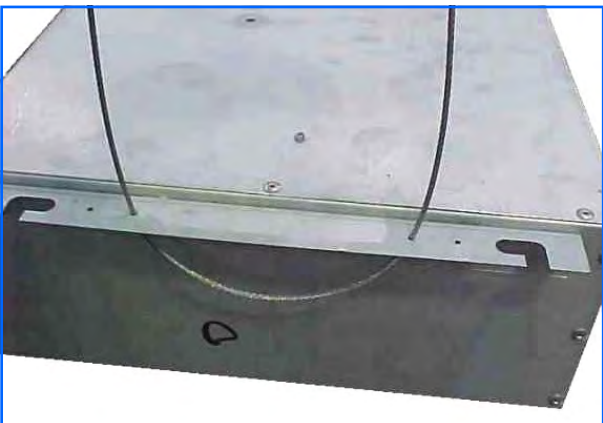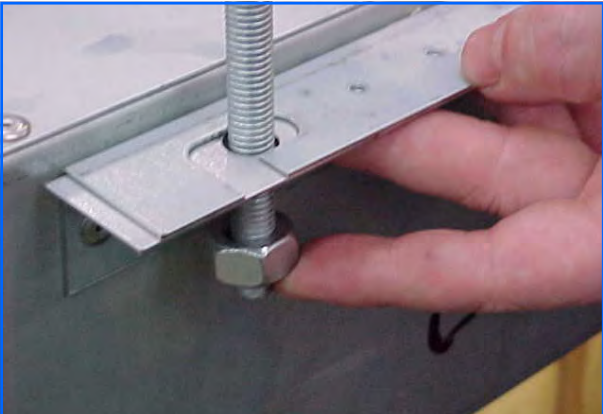

Step 7

The height between the ceiling face and the face of the air curtain case needs to be adjusted to circa 40mm to enable the grille assembly to fit flush with the ceiling. Adjust accordingly.

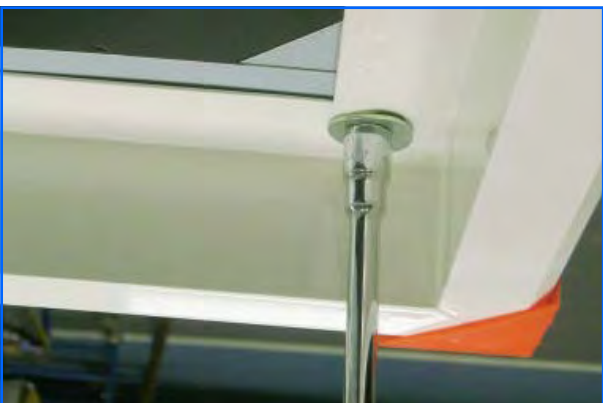

After fitting the product in the ceiling recess and

adjusting the height to ensure that the grille sits flush to the ceiling (when re-fitted) take the grille assembly and refit using the screws removed during Step 5.

5.4 Installation details - Std Controller

The Electronic base unit is pre-installed inside the air curtain. All the external electrical connections are via screw terminals onto this base unit.

The program panel is installed on a separate fascia plate and connected to a surface mounted back box in a suitable location. Please see fig 5.

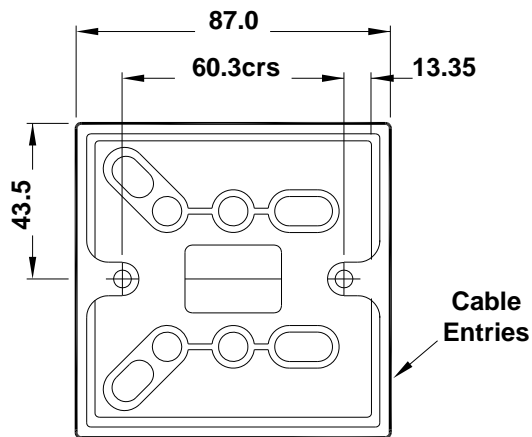


Fig. 5. Surface mount location holes.

Alternatively, the program panel can be flush wall mounted with the addition of a suitable conduit box MK part number 861 ZIC or equivalent.

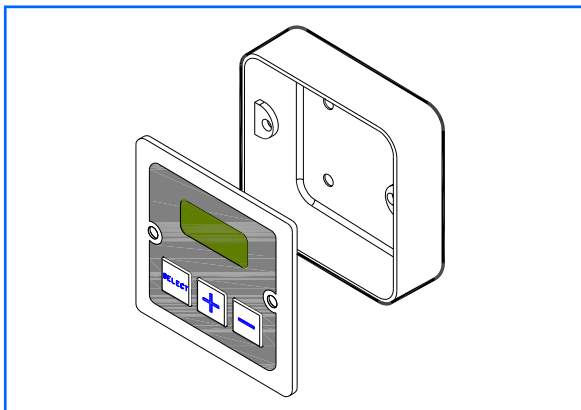


Fig. 6. Alternative conduit box

The distance between the base unit and the program panel can be up to 50m maximum.

5.5 Installation details - Option SmartElec Controller

The SmartElec base unit is pre-installed inside the air curtain. All the external electrical connections are via screw terminals onto this base unit.

The SmartElec program panel is installed in a separate housing and connected to a surface mounted back box in a suitable location. Please see fig 7.

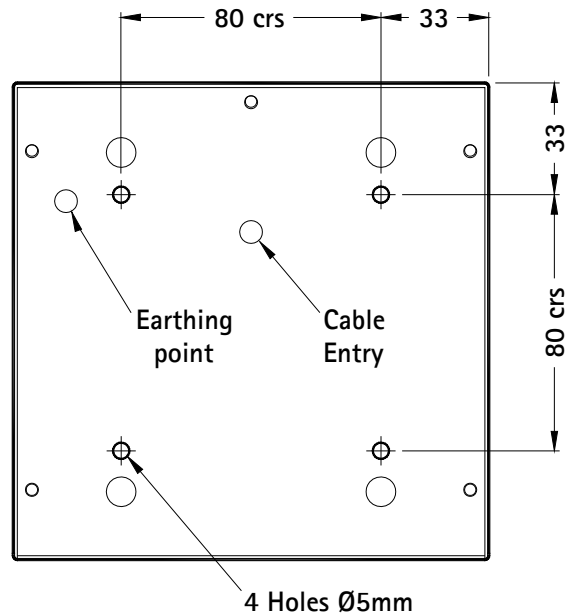


Fig. 7. Surface mount location holes.

Alternatively, the program panel can be flush wall mounted with the addition of a suitable conduit box MK part number 893 ALM or equivalent.


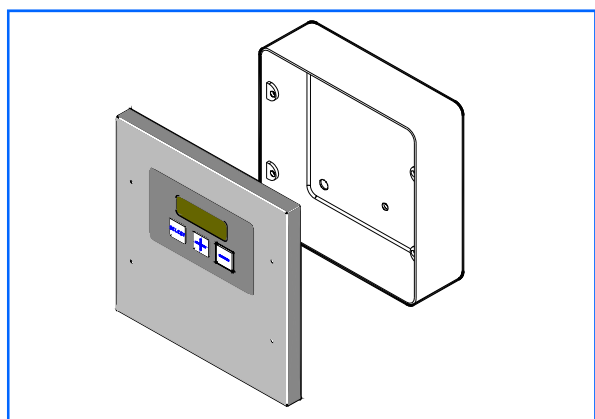


Fig. 8. Alternative conduit box

The distance between the base unit and the program panel can be up to 50m maximum.

5.6 Installation details - LPHW Only

With the grille open, the heating coils are mounted

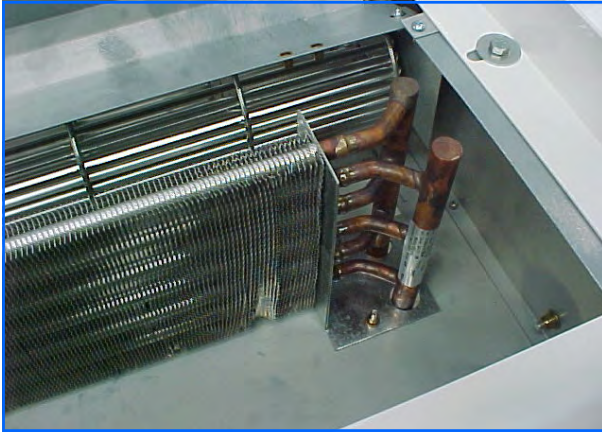


as shown below.

The coils can be handed for right or left hand exit by turning the coil through 180°.





The flow and return pipes are shown below.
Carefully close the grille and refit the fixing screw.

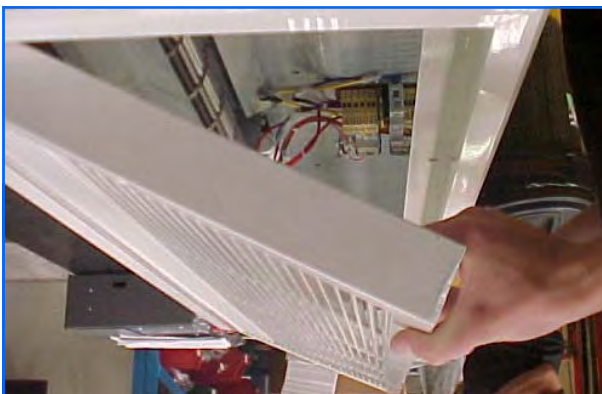

Test product as shown in the User Instructions.

5.7 Installation wiring

With case removed, connect the electrical supply and program panel interconnecting wiring to the

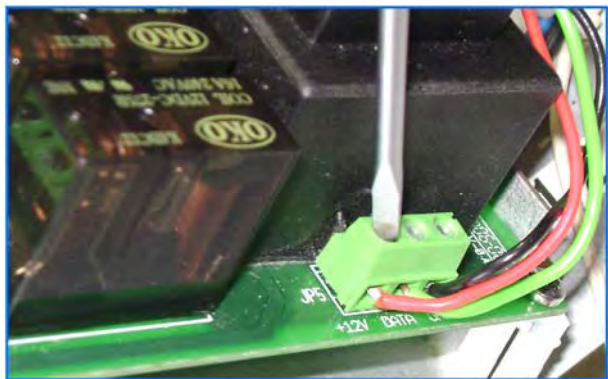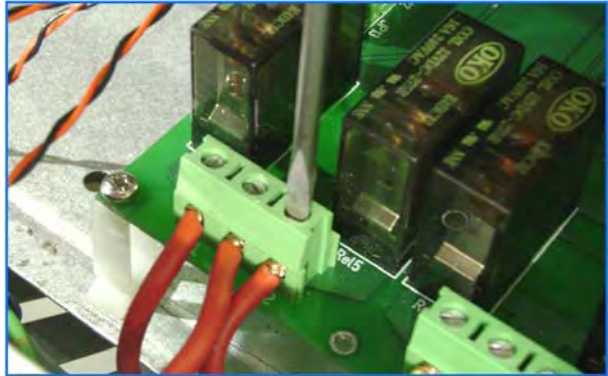

6. Servicing & Maintenance.

! ALWAYS ENSURE THAT THE MAIN EXTERNAL ELECTRICITY SUPPLY IS SWITCHED OFF BEFORE COMMENCING ANY MAINTENANCE ON THIS HEATER.

To obtain the best results from the heater, it is essential to avoid the accumulation of dust and dirt within the unit on the air inlet and discharge grilles. For this reason regular cleaning is necessary, paying particular attention to the removal of dirt build up on the rotor blades.

Cleaning of the fan is best carried out with a soft brush.


A single drop of light oil should be applied to the motor bearing from time to time.

The product should be serviced annually. Servicing shall be undertaken by a competent person. Airbloc offer a service facility, call 01384 489700.

Step 1



Using a pozidrive screwdriver remove the M5 screws at the side of the grille.

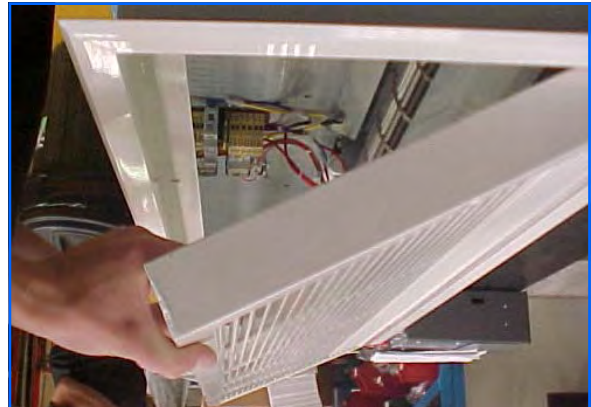

Step 2

Access to the inside of the air curtain grille can be made.

Open the grille. The grille is hinged to prevent the inner frame from dropping

Step 3



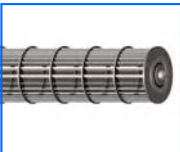






With a soft brush clean away any dust from the motor and elements.

Check all connections and components for soundness or signs of deterioration and replace as necessary.

Re-assemble and test.

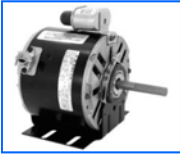

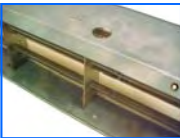


7. Spare parts

7.1 General

	Description	ACR100SE6/ ACR100SE9/ ACR100SW9/ ACR100SA	ACR150SE12/ ACR150SW12 /ACR150SA	ACR200SE18/ ACR200SW18 /ACR200SA	ACR120HE12/ ACR120HW12 /ACR120HA	ACR180HE18/ ACR180HW18 /ACR180HA
	Motor	100003	100003	100012	100535	100535
	Relay	900000	900000	900000	900078	900078
	Rotor Left Hand	100001	100006	100010	100010	100541
	Rotor Right Hand	100536	100537	100538	100538	100538
	Thermal cut out	900001	900001	900001	900001	900001
Element assembly						
	Rating		6kW	9kW	12kW	18kW
	HE Part No		-	-	100526	100527
	Length		-	-	1.0m	1.5m
	SE Part No		101565	100004	100008	100013
	Length		1.0m	1.0m	1.5m	2.0m
Coil LPHW only						
	Rating		9kW	12kW	18kW	
	HE Part No		-	100989	100990	
	Length		-	1.0m	1.5m	
	SE Part No		101279	101280	101281	
	Length		1.0m	1.5m	2.0m	
	Program Panel	XXXXXX	XXXXXX	XXXXXX	XXXXXX	XXXXXX
	Base unit	XXXXXX	XXXXXX	XXXXXX	XXXXXX	XXXXXX

7.2 SmartElec controller

⚠ Due to the nature of it's construction, it is not advisable to repair damaged electronic components on either the SmartElec base unit or Program panel.

	Description	ACR100SE9/ ACR100SW9	ACR150SE12/ ACR150SW12	ACR200SE18/ ACR200SW18	ACR120HE12/ ACR120HW12	ACR180HE18/ ACR180HW18
	Program Panel	900306	900306	900306	900306	900306
	Base Unit	900307	900308	900309	900308	900309
	Fuse	900326	900326	900327	900326	900327
	Heat Sensor	900329	900329	900329	900329	900329
	Cooling Fan	n/a	n/a	900330	n/a	900330

8. Fault Finding.

8.1 General

If the air curtain does not operate after running through the detail provided in Section 6, then a suitably competent service engineer should be called to identify the nature of the fault.

Note The manufacturer operates a service function from the address provided in these instructions.

All Air Curtains are fitted with fuse protection and motor thermal protection.

Other faults in relation to the element, motor and wiring should be identified using conventional fault finding techniques.

In the event that electrical components are replaced, please ensure that electrical safety checks in accordance with the regulations in force in the country of use are undertaken.

8.2 Electrically heated units only.

For the service engineer, please note that there is a thermal cut-out incorporated in the air curtain which needs to be manually reset. The cut-out is located near to the mains terminal block.

Re-setting the thermal cut-out may help to identify the nature of the fault however we do not recommend re-set without a thorough investigation into why the cut-out operated.



fig.9. Thermal cut-out

8.3 Electronic Controller.

If the air curtain goes into thermal trip (overheat) the **Airbloc Electronic** control displays an 'ERR' code. Refer to air curtain instructions to remedy.

The **Airbloc Electronic** control base unit is protected from any short circuit on the air sensor or heatsink sensor as the short circuit will cause the temperature to go high and trigger over

temperature alarm.



fig.10 Electronic controller

1: Polarity: Use a multimeter to check correct polarity between all three cores i.e. that +12V goes to +12V, DATA goes to DATA, and GND to GND.

2: Continuity: Use a multimeter to check continuity between each end of all three cores.

3: Short circuit: Use a multimeter to check that there are no short circuits between any of the three cores.

N.B. This test should be done with both ends of the cable disconnected to avoid false readings.

4: Plugs:

a) Check that the correct length of insulation has been stripped from each core.

b) Check the tightness of the cables in the plugs.

8.4 SmartElec Controllers.

The SmartElec control raises an alarm if any of its inputs are outside their normal working scope. The alarms are displayed on the program panel as an "alarm" code with a prefix "a". See chart over.

As the alarms are not mutually exclusive, the alarm code displayed on the program panel are accumulative. For example, if both air sensor and heatsink sensor fail, the Program panel will display "a 20" as the Alarm code.

Apart from the communication failure alarm [code a1], which could be due to a broken connection of the RS485 link, all other alarms will cause the Base unit to switch off the heater output.

The SmartElec base unit is protected from any short circuit on the air sensor or heatsink sensor as the short circuit will cause the temperature to go high and trigger over temperature alarm.

There are five basic checks to perform should 'a1' appear on the program panel display. These are as follows:

1: Polarity: Use a multimeter to check correct polarity between all 4 cores i.e. that 0v goes to 0v, 7v goes to 7v, A to A, and B to B.

2: Continuity: Use a multimeter to check continuity between each end of all four cores.

3: Short circuit: Use a multimeter to check that there are no short circuits between any of the four cores.

N.B. This test should be done with both ends of the cable disconnected to avoid false readings.

4: Plugs:

a) Check that the correct length of insulation has been stripped from each core.

b) Check the tightness of the cables in the plugs.

c) Check that the plugs are fitted to the correct circuit board pins.

d) Check that the plugs are firmly seated on the circuit board pins in both the program panel and on the base unit.


e) Check for continuity between the plug terminal screw and the pcb pin with the plug in place, (accessible through plug moulding).

5: Addressing: (Network versions only). If two or more air curtains are networked, check that each base unit has a unique address as described in section 12.3

10.4.1 SmartElec fault codes

Code	Description	Symptom	Possible Cause	Remedy
a 1	COMMUNICATION FAILURE. Code 'a 1' is displayed when the Program panel loses communication with the base unit.	No control	- Terminals wired incorrectly	- Check wiring diagram section 5
			- Incorrect Polarity	- Swap cables to terminals '0V' & '7V'
			- Damaged cable	- Replace with suitable wiring
a 2	AIR SENSOR TOO HOT. Code 'a 2' is displayed when the air sensor detects an ambient temperature above 60°C	High Ambient Air		
		Lack of air flow through & into unit.	- Impellor turning in opposite direction.	- Check rotation of impellor.
			- Motor failure.	- Check Motor & replace if necessary.
a 4	AIR SENSOR FAILURE. Code 'a 4' is displayed when the air sensor is open circuit	Fan operating. No heat.	- Air sensor wiring disconnected	- Check wires.
			- Air sensor Broken	- Replace Air Sensor.
a 8	HEATSINK TOO HOT Code 'a 8' is displayed when the sensor on the heatsink detects a temperature above 65°C		- High Ambient air/damaged Heatsink	- Replace SmartElec Base unit.
			- Damaged Cooling Fan	- Replace cooling fan
a 16	HEATSINK SENSOR FAILURE. Code 'a 16' is displayed when the heatsink is open circuit		- Heatsink wiring disconnected	- Check wires.
			- Heatsink Broken	- Replace SmartElec Base unit.

10.4.2 SmartElec base unit LED indicator location/function:

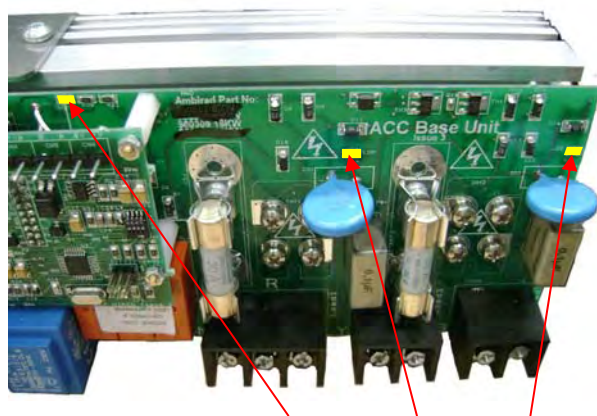

No heat fan on or off	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Heat on fan on	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Up to temperature	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Key

<input type="checkbox"/>	= OFF
<input checked="" type="checkbox"/>	= ON
<input type="checkbox"/>	= PULSING


9. Parts replacement.

9.1.1 Electrical element replacement SE.

Step 1 Using a pozidrive screwdriver remove the M5 screws at the side of the grille. Access to the inside of the air curtain grille can be made. Open the grille. The grille is hinged to prevent the inner frame from dropping.

Step 2

Disconnect element wires and if necessary remove cut-off plate fixing screws.

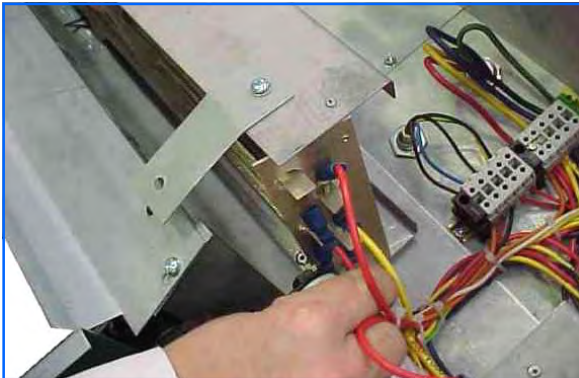

Step 3

Remove element top fixing screws. Locate and remove element fixing screws by inserting a screwdriver through the hole indicated below.



Step 4


Lift out element cartridge, replace as required.



9.1.2 Electrical element replacement HE.


Step 1 Using a pozidrive screwdriver undo screws securing the grille and remove. Remove 4 screws securing the top of the case and remove. Slacken two hinging bolts on both ends. Remove three bolts securing the access plate. Carefully hinge down the access plate. *Note Take the weight as access plate swings down.*

Step 2

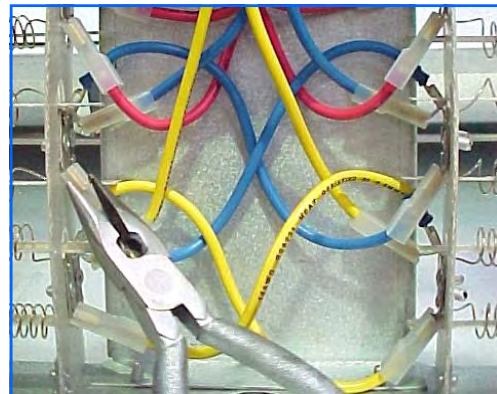

Carefully remove connections to the elements, noting wiring configuration.

Step 3

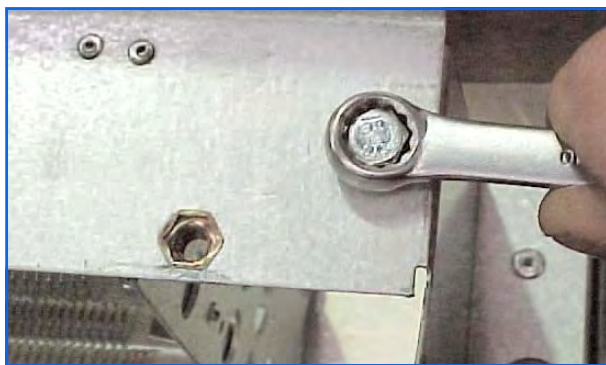

Remove two bolts securing elements.

Step 4




9.2.1 Rotor and motor replacement SE

Step 1 Using a pozidrive screwdriver remove the M5 screws at the side of the grille. Access to the inside of the air curtain grille can be made. Open the grille. The grille is hinged to prevent the inner frame from dropping.

Step 2

Remove fastening holding rotor support bracket

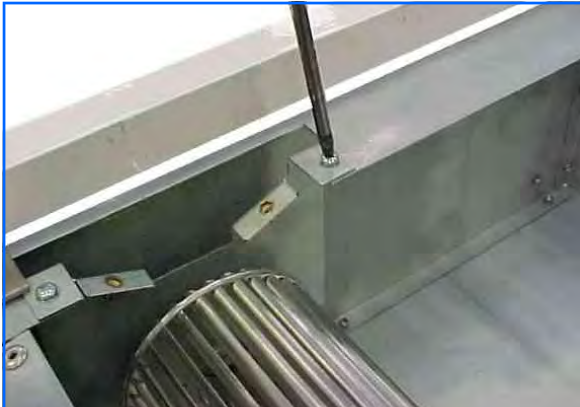


Step 3

Move rotor support bracket towards outside of case.




Step 4

Disengage rotor bearing.

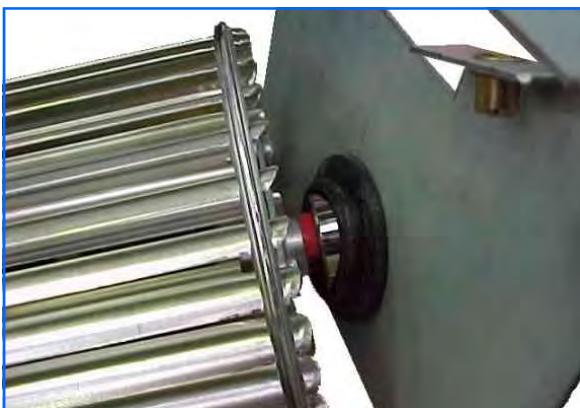

Step 5

Disconnect rotor from motor shaft.

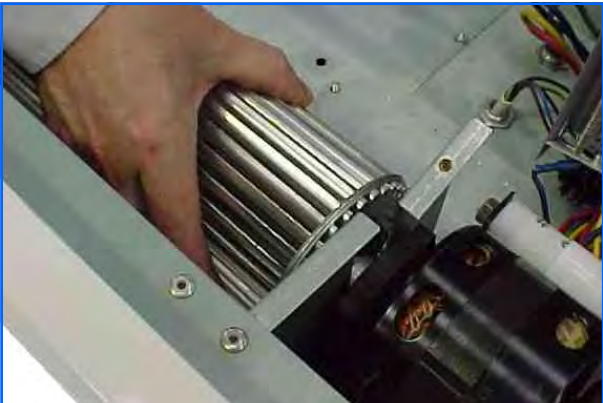

Step 6

Ensure on replacement of rotor that the flat on the rotor bearing aligns with the flat on the motor shaft.



Step 7

Disconnect motor facing clips (2) using a large screwdriver and exerting downward pressure. A sharp tap can help in releasing the clip. Disconnect the wires from the motor to the mains terminal rail.



Replace motor in reverse order.

Carefully close the grille and refit the fixing screw.

Test product as shown in the User Instructions.

9.2.2 Rotor and motor replacement HE

Step 1 Using a pozidrive screwdriver undo screws securing the grille and remove. Remove 4 screws securing the top of the case and remove. Slacken two hinging bolts on both ends. Remove three bolts securing the access plate. Carefully hinge down the access plate. *Note Take the weight as access plate swings down.*

Step 2

Remove 3 screws securing fan bearing plate to access panel.


Step 3

Carefully remove plate with bearing housing from rotor bearing.




Step 4

Slacken the grub screw securing rotors to the motor shaft, remove . Repeat for opposite rotor.

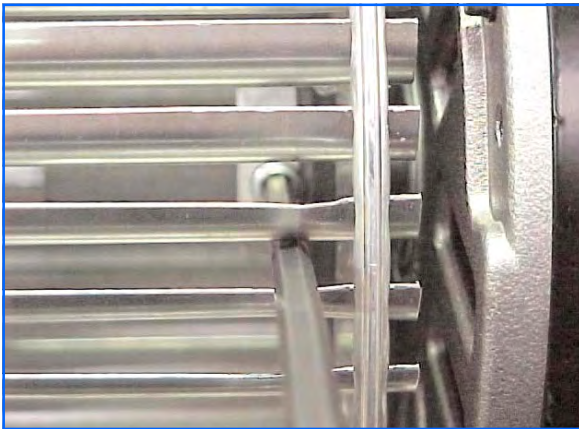


Step 5

Disconnect the wires from the motor to the mains terminal rail.

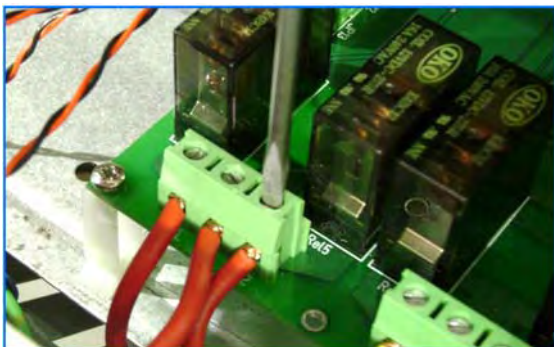

Step 6

Remove the bolts securing the motor to the chassis.

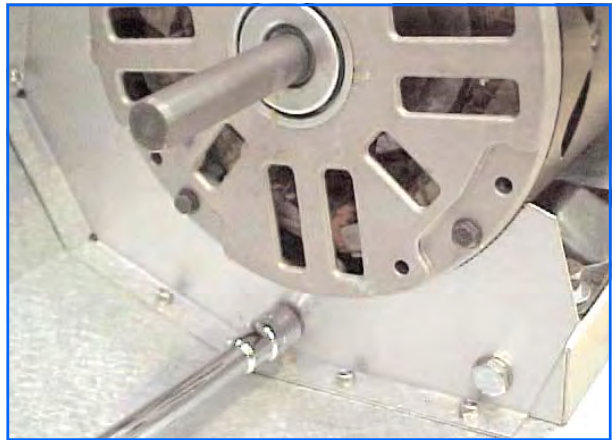

Replace motor in reverse order. Carefully close the grille and refit the fixing screw.

Test product as shown in the User Instructions.

9.3 LPHW element replacement.

Step 1 Using a pozidrive screwdriver undo screws securing the grille and remove. Remove 4 screws securing the top of the case and remove. Slacken two hinging bolts on both ends. Remove three bolts securing the access plate. Carefully hinge down the access plate. *Note Take the weight as access plate swings down.*

Step 2


Disconnect flow connections with appropriate tools.

Step 3

Remove element fixing screws.

Step 4

Remove element.

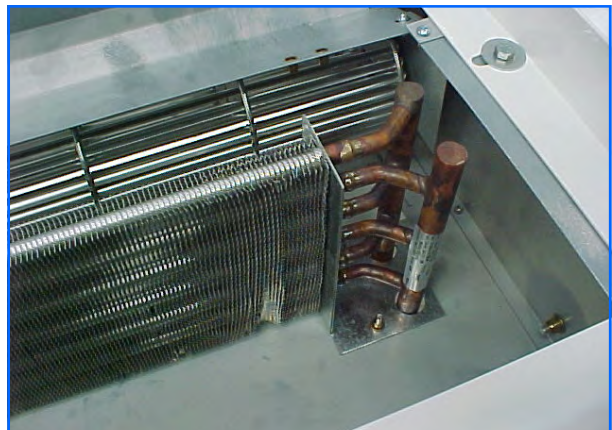

10. User Instructions.

fig.11. Electronic Controller



10.1 Keypad

The **SELECT** button will allow you to navigate.

The **+** button will allow you to increase the setting.

The **-** button will allow you to decrease the setting.

10.2 Operation

On first power up, the display panel will have the following default settings:

- F. 0 (no fan)
- H. 0 (no heat)
- 1. 16 (°C. Heat set point - Auto mode only)
- 2. 7 (°C. half heat set point - Auto mode only)
- D. 2 (fan speed in door switch mode)

*Note: the unit will be set to 'Off' on initial start up as a safety precaution

Press the **+** or **-** buttons to toggle between the 'F' (Fan), 'H' (Heat) and On/Off Parameters.

Prefix 'F' denotes the **FAN SPEED**. This can be either 1: slow ; 2: medium or 3: fast speed. 0 setting denotes the unit is **OFF**.

To alter the current speed, press the **SELECT** button. The value will start flashing.

Press the **+** or **-** buttons to increase/decrease the desired setting.

Press the **SELECT** button to confirm new setting. A delay of 2 seconds will return to the original display.

Prefix 'H' denotes the **HEAT** setting. This can be either 1: low heat; or 2: high heat. 0 setting denotes the unit is set at fan only.


To alter the current setting, press the **SELECT** button. The value will start flashing.


Press the **+** or **-** buttons to increase/decrease the desired setting.


Press the **SELECT** button to confirm new setting. A delay of 2 seconds will return to the original display.




The next parameter will either turn the unit On or Off.


To turn the unit Off, press the  button. 'On' will start flashing.

Press the  button. 'Off' will start flashing.

Press the  button to confirm new setting.

To turn the unit On, press the  button. 'Off' will start flashing.

Press the  button to alter to 'On'.


Press the  button to confirm new setting. A delay of 4 seconds will return to the 'F' Fan parameter.






10.3 Engineers settings



10.3.1 Auto Mode


The controller can be set automatic control only when used in conjunction with an outside sensor.

To access the engineers setting, first ensure that the display is in the (H) HEAT parameter. Press and hold the  button for 5 seconds. Set point '1' will appear.




If the outside air temperature is above this value, there is no heat power. If the outside temperature falls below this value but is above set point 2, then the heat will be at half power. (Range: 0 - 30 degrees).


To alter the setting, press the  button then the  or  buttons to increase/decrease the desired setting.

Press the  button to confirm new value and use the  button to move to the next setting. (A delay of 2 seconds will return to the original display.)


If you have previously pressed the  button, Set point '2' will appear.

If the outside air temperature falls below this value, the heat will be at full power. If the outside temperature is above this value but is below set point 1, then the heat will be at half power. (Range: 0 - 30 degrees)




To alter the setting, press the  button then the  or  buttons to increase/decrease the desired setting.


Press the  button to confirm new value and move to the next setting. (A delay of 2 seconds will return to the original display.)



If you have previously pressed the  button, setting 'A' will appear.

This setting will enable the Auto Mode. (Range: On/Off)


To alter the setting, press the  button then the  or  buttons to increase/decrease the desired setting.

Press the  button to confirm new value. The Auto Mode display will remain until cancelled by following this procedure in reverse.







10.3.2 Door Switch Mode

The controller can be set to a preset fan speed when the door opens. This function can only be used in conjunction with a door switch.

To access the engineers setting, first ensure that the display is in the (F) FAN parameter. Press and hold the  button for 5 seconds. Setting 'd' will appear.

*The air curtain operates as normal under the program of the Fan and Heat settings. As the door opens the air curtain changes state to the settings preset in this mode. As the door closes, the air curtain returns to normal. (Range: 1: slow ; 2: medium or 3: fast speed. 0 setting denotes the unit is **OFF**.)*

To alter the setting, press the  button then the  or  buttons to increase/decrease the desired setting.

Press the  button to confirm new setting. A delay of 2 seconds will return to the original display.



10.4 Option SmartElec Controller

fig.12. SmartElec




10.3.1 Keypad

The **SELECT** button will allow you to navigate.

The **+** button will allow you to increase the setting.

The **-** button will allow you to decrease the setting.

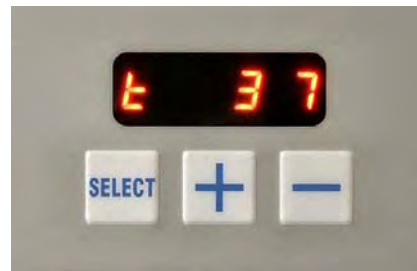

10.3.2 Operation

When power is applied to the controller, the display will illuminate with the air outlet sensor temperature. This is denoted by the prefix 't' followed by the actual temperature at the probe in °C.

Pressing the **SELECT** button will advance the display to 'U 0'. This denotes a single or No. 1 air curtain.

*Pressing the **+** button increases this number to a maximum of 15. This should be set to show the actual number of air curtains in the network. Each air curtain can be independently set by first entering the air curtain number, then pressing **SELECT** to access the parameters described below.



Pressing the **SELECT** button again will advance the display to the outlet SET temperature (default = 'S' 25)

This is denoted by the prefix 'S' followed by the required set temperature in °C. Temperature settings between 16° and 35°C can be set (16°C equals maximum savings).

Use the **+** or **-** buttons to increase/decrease the desired setting.




Pressing the **SELECT** button again will advance the display to the HEAT setting (default = 'H' 25).


This is denoted by the prefix 'H' followed by either a '0' for HEAT OFF (AMBIENT ONLY) or '1' for HEAT ON (default = 'H1')

Use the **+** or **-** buttons to increase/decrease the desired setting.




Pressing the  button again will advance the display to the FAN setting (default = 'F' 1). This is denoted by the prefix 'F' followed by either a '0' for FAN (UNIT) OFF, '1' for LOW FAN, '2' for MEDIUM FAN or '3' for HIGH FAN (default = 'F 2').

Use the  or  buttons to increase/decrease the desired setting.



Pressing the  button again will return to the first screen or will return automatically to the first screen after a period of 3 minutes.

* 'U 0' denotes air curtain No.1, 'U 1' denotes air curtain No.2, & so on, up to a maximum of 15. See section 4 'installer wiring details' for addressing instructions.

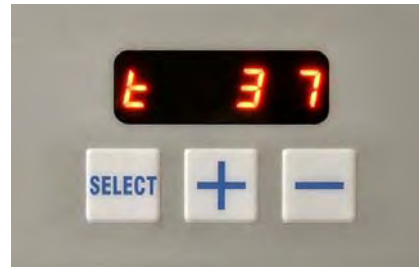

10.3.3 SmartElec air curtain addressing


Each air curtain in the network must have a unique address (0-15) This is achieved using the 4 way DIL switch mounted on the base unit PCB (see photo).

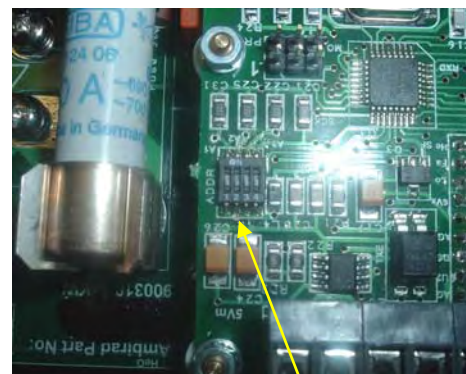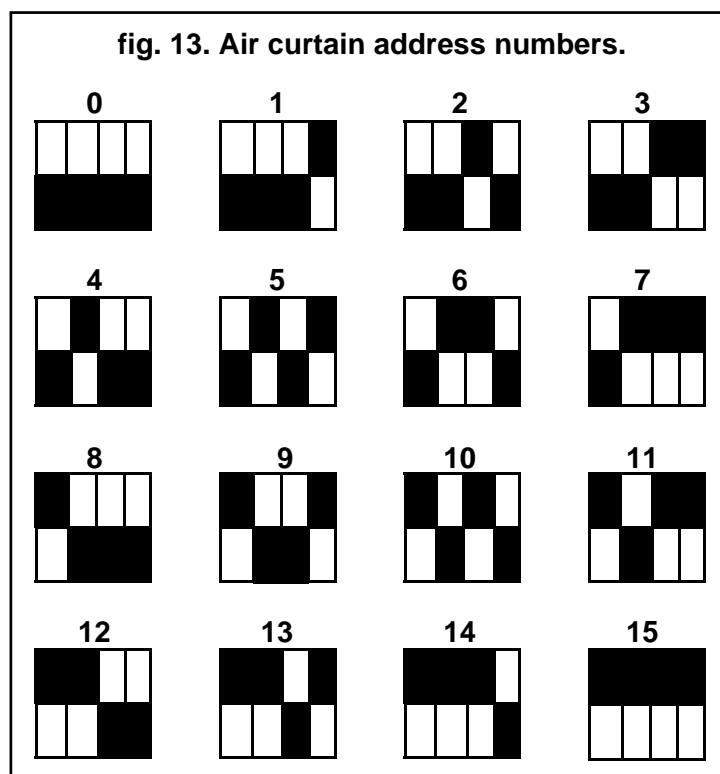

DIL SWITCH

The black shaded areas represent the switch position.

The example opposite shows the air curtain set to No.1.

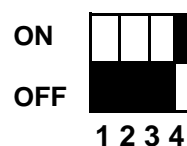



AmbiRad Limited Fens Pool Avenue
Brierley Hill West Midlands DY5 1QA
United Kingdom.

Telephone 01384 489700
Facsimile 01384 489707
Email marketing@airbloc.co.uk
Website www.airbloc.co.uk
Technical Support www.s-i-d.co.uk

 An AmbiRad Group brand

 **AIRBLOC**
ENERGY SAVING AIR CURTAINS